


ED.
 T FOLLOWING : 4CH/2CH

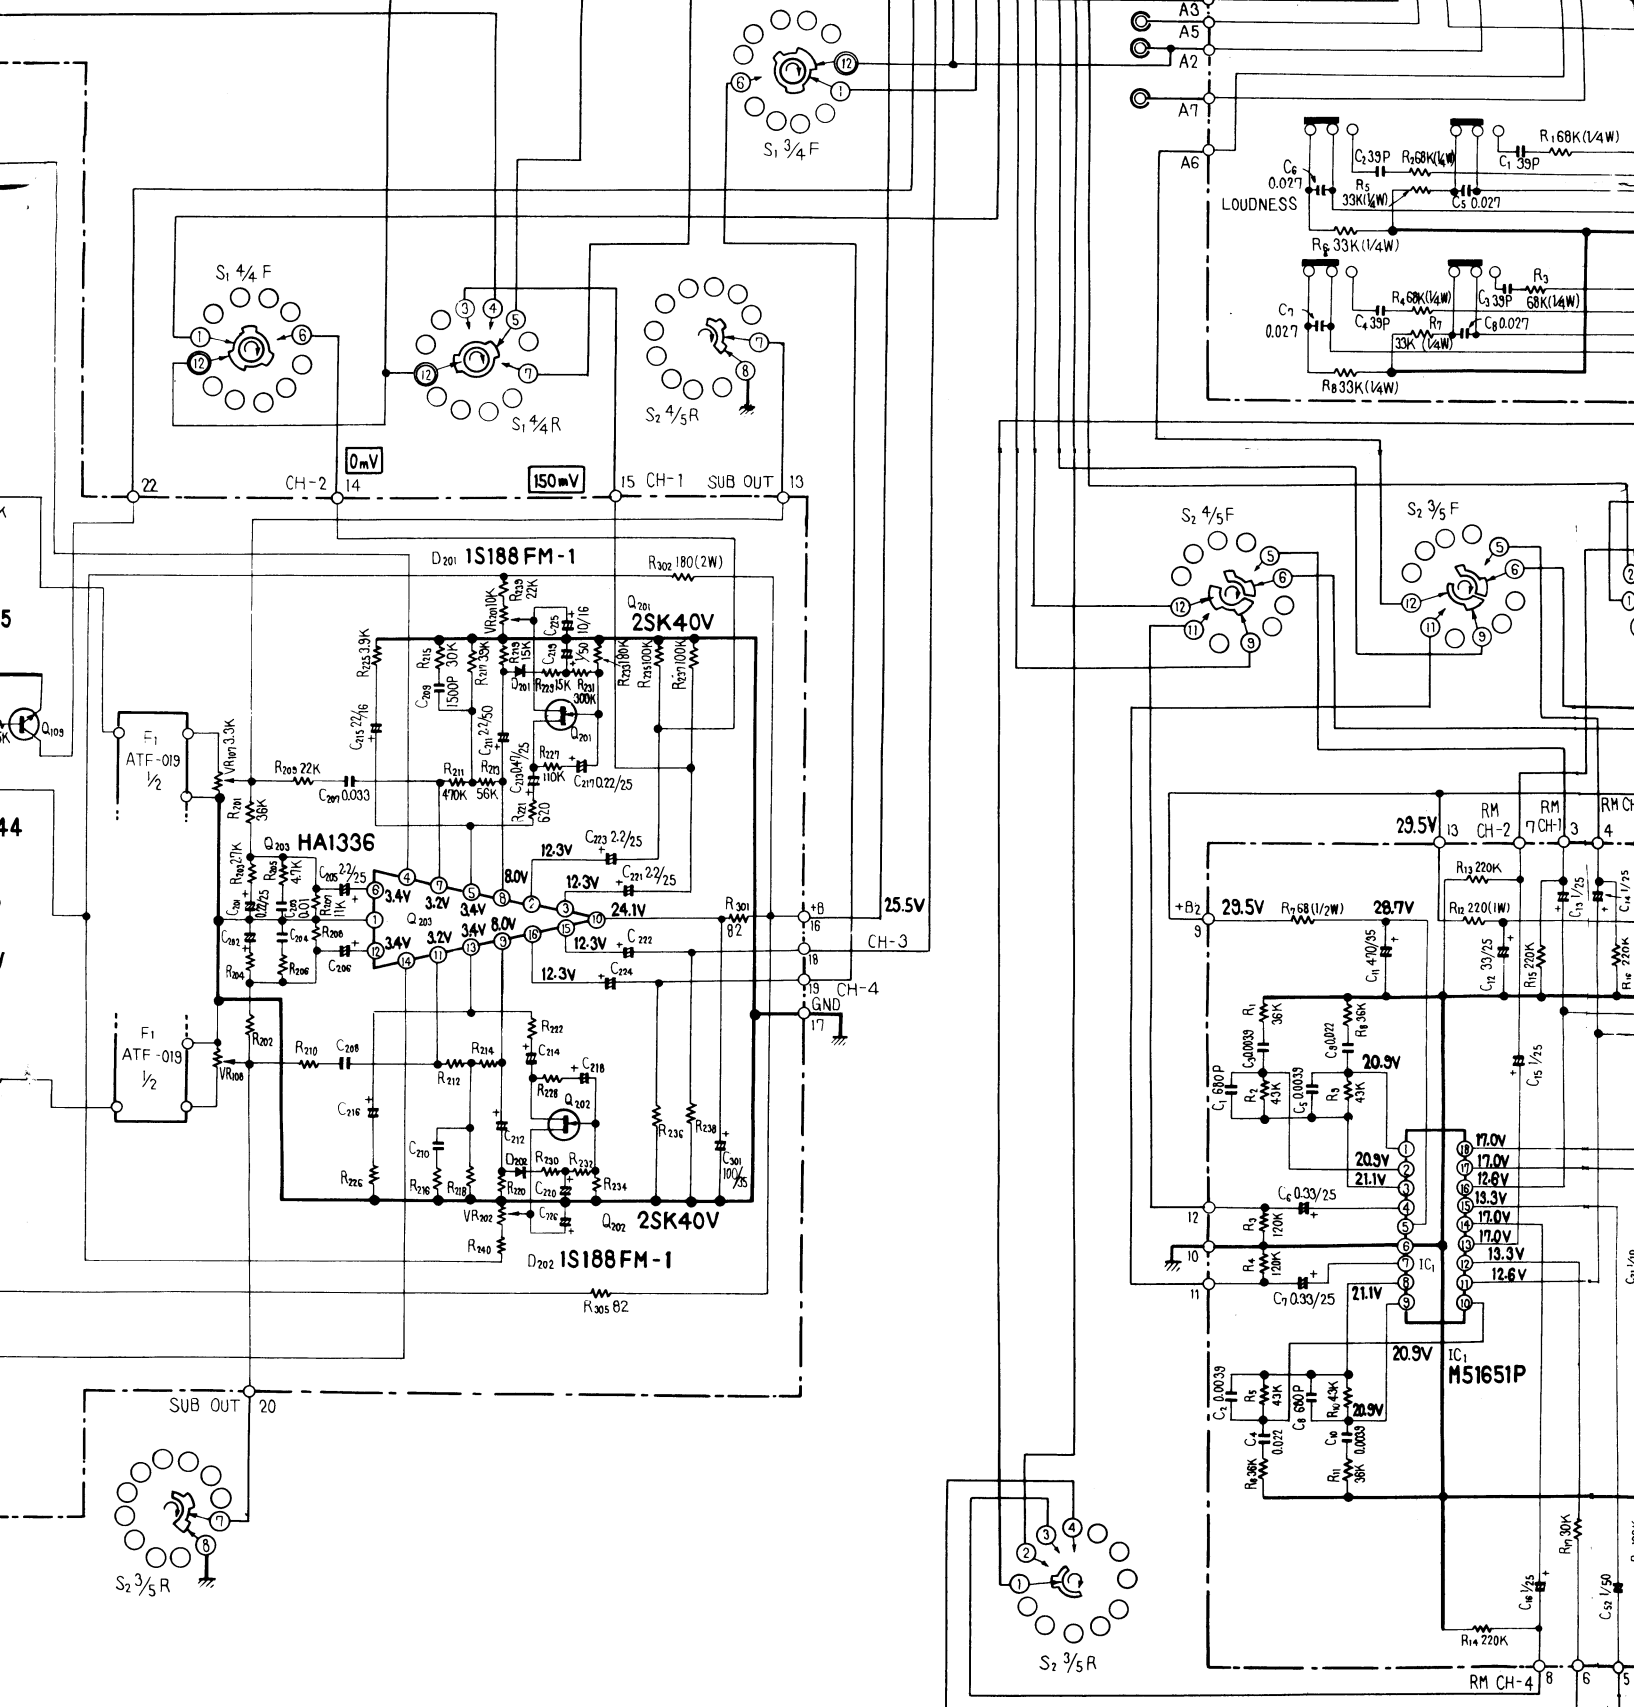

TING SWITCH
2CH

CH
N

H

- S₉ : INDICATOR LEVEL -20 dB
ON → OFF
- S₁₀ : INDICATOR LEVEL -10 dB
ON → OFF
- S₁₁ : MUTING SWITCH
OFF → ON
- S₁₂ : SPEAKER FRONT
A → B

- S₁₃ : SPEAKER ALL
ON → OFF
- VR_{1,2} : CD-4
CHANNEL SEPARATION
- VR₃ : BALANCE VOLUME
- VR₄ : MAIN VOLUME

RESISTORS
IN OHM, 1/4W, ± 5% TOLERANCE
UNLESS OTHERWISE NOTED.

CAPACITORS
IN μF UNLESS OTHERWISE NOTED.
P : pF

/ DC VOLTAGE IS SHOWN AT FOLLOWING POINTS



AUX
140/175mV

PHONO
2.4/2.3mV


CD-4 ASSY AWM-076

75mW MAIN OUT P1 23

FM 4CH
MPX-OUT

PHONO

AUX

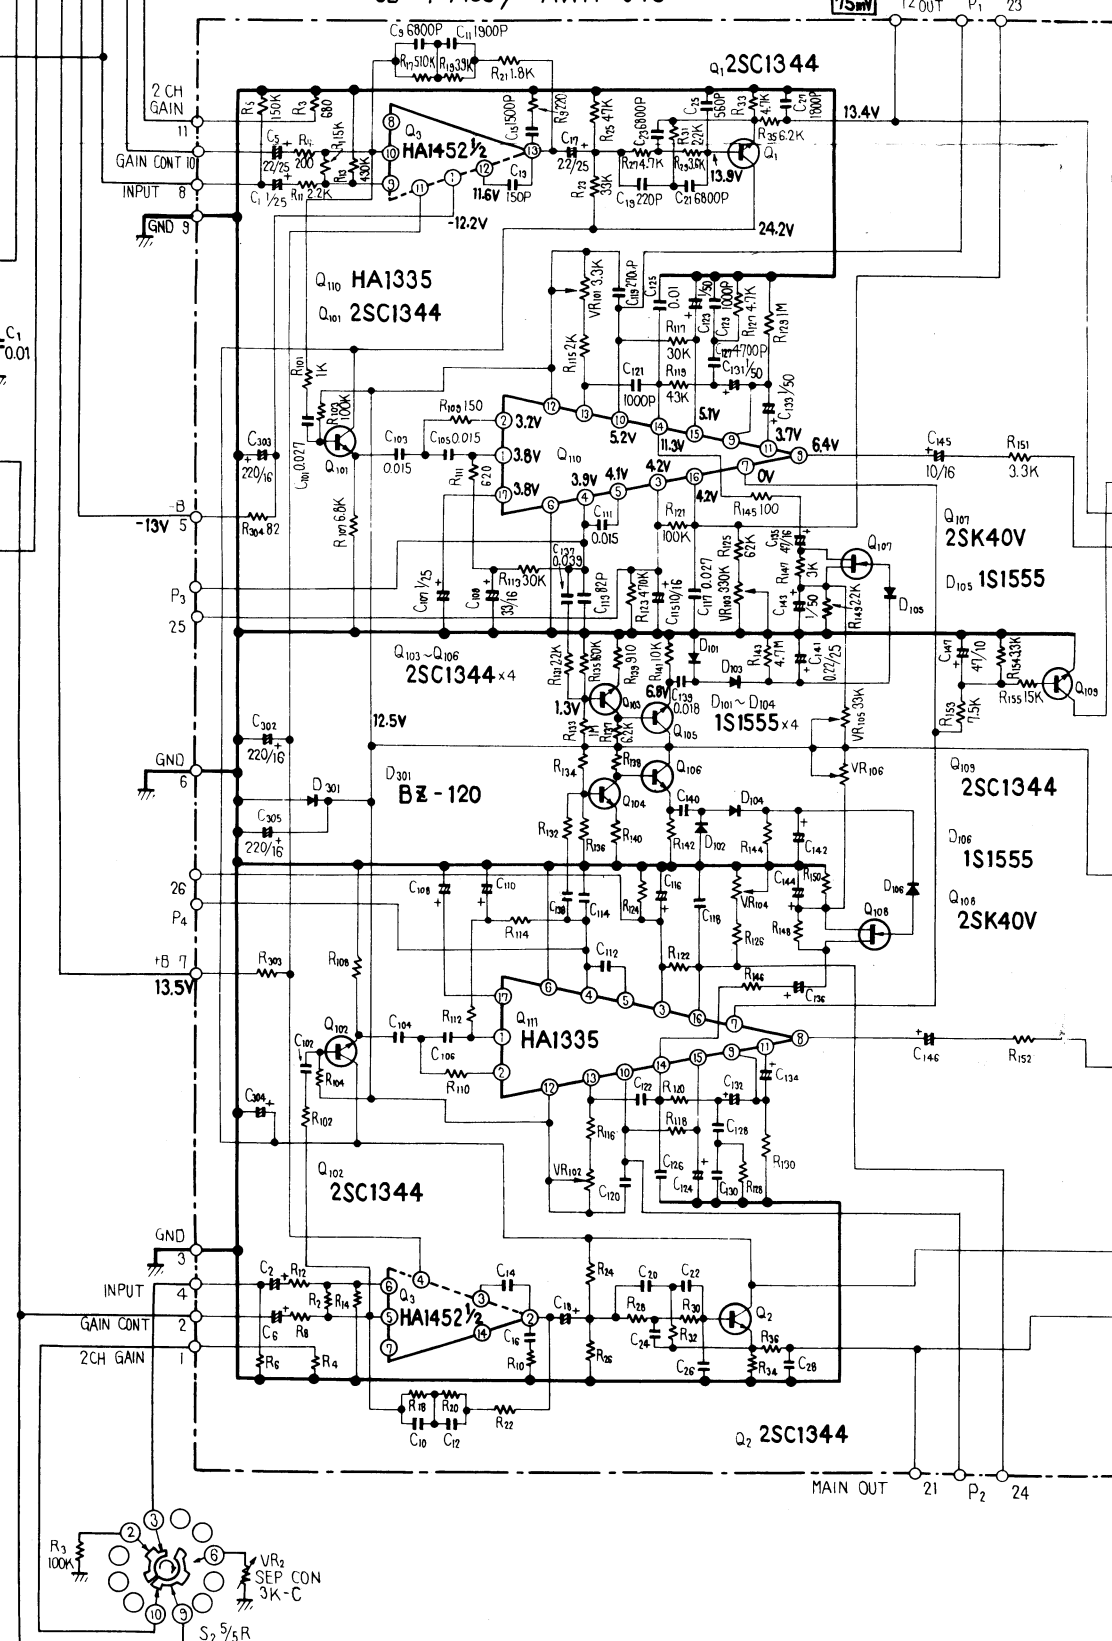

NOTES

- S₁ : FUNCTION SWITCH
 - 1. AM 2.FM-MONO 3.FM-AUTO
 - 4. PHONO 5. AUX
- S₂ : MODE SWITCH
 - 1. 2CH 2.4CH-CD-4 3. RM
 - 4. SQ FULL LOGIC
- S₃ : BACANT
- S₄ : POWER BOOSTING SWITCH
 - 4CH ↔ 2CH
- S₅ : POWER SWITCH
 - OFF ↔ ON
- S_{6,8} : RELAY
- S₇ : MICRO SWITCH