





- 1) S₁₀₀₋₁ ~ S₁₀₀₋₂ : INPUT SELECTOR SW.
- 2) S₁₀₀₋₁ ~ S₁₀₀₋₂ : HEAD SELECTOR SW. (FWD ~ REV)
- 3) S₁₀₀₋₁ ~ S₁₀₀₋₂ : FWD-REV SELECTOR SW. (FWD POSITION)
- 4) S₁₀₀₋₁ ~ S₁₀₀₋₂ : FWD-REV SELECTOR SW. (REV POSITION)
- 5) S₁₀₀₋₁ ~ S₁₀₀₋₂ : PLAYBACK EQUALIZER SW. (7 1/2 IPS POSITION)
- 6) S₁₀₀₋₁ ~ S₁₀₀₋₂ : PLAYBACK EQUALIZER SW. (17 1/2 IPS POSITION)
- 7) RL₁₀₀₋₁ ~ RL₁₀₀₋₂ : RECORDING EQUALIZER SW. (7 1/2 IPS POSITION)
- 8) S₁₀₀₋₁ ~ S₁₀₀₋₂ : MUTING SW. (ON POSITION)
- 9) S₁₀₀₋₁ ~ S₁₀₀₋₂ : LINE OUT SW. (DIRECT POSITION)
- 10) S₁₀₀₋₁ ~ S₁₀₀₋₂ : MONITOR SW. (TAPE POSITION)
- 11) S₁₀₀₋₁ ~ S₁₀₀₋₂ : BIAS SELECTOR SW. (A POSITION)
- 12) S₁₀₀₋₁ : POWER SW. (OFF POSITION)
- 13) S₁₀₀₋₁ ~ S₁₀₀₋₂ : FWD-REV SELECTOR SW. (FWD POSITION)
- 14) S₁₀₀₋₁ ~ S₁₀₀₋₂ : MODE SW. (STEREO POSITION)
- 15) RESISTORS NONMARK : OHM , K : KILOHM
- 16) CAPACITORS NONMARK : μF , P : p.p.F