
Circuit Board Reference - By Board

Board Number	Model	Board Description
F-1038-1	TU-999	AM IF Circuit Board
F-1064	AU-222	Head AMP Circuit Board
F-1082	AU-222	Main AMP Circuit Board
F-1083	AU-222	Control AMP Circuit Board
F-1103A	TU-999	FM IM Circuit Board
F-1137A	TU-999	Power Circuit Board
F-1159	AU-999	Driver Circuit Board
F-1208	AU-999	Filter Circuit Board
F-1209	AU-999	Tone Control Circuit Board
F-1220	TU-999	AM Meter Circuit Board
F-1228-1	AU-999	Head Amp Circuit Board
F-1230	AU-999	Ripple Filter Circuit Board
F-1231	AU-999	Plus Ripple Circuit Board
F-1236	TU-999	Audio AMP Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-1239	350A	
F-1247	350A	
F-1248	350A	
F-1249	350A	
F-1250	350A	
F-1273	TU-999	MPX Circuit Board
F-1277	AU-999	Minus Ripple Circuit Board
F-1302	AU-101	Main Amp Block
F-1303	AU-101	Equalizer/Tone Control Block
F-1324	350A	
F-1332	TU-999	Muting Circuit Board
F-1334	AU-999	SP Protector Circuit Board
F-1461	QRX-7001	Protection Circuit Board
F-1506B		

Circuit Board Reference - By Board

Board Number	Model	Board Description
	TU-5500	Tuner circuit board
F-1507	QRX-7001	FM Tuner Circuit Board
F-1511	TU-5500	Power supply circuit board
F-1519	9090DB	FM Pack Circuit Board
	QRX-7001	FM Pack Circuit Board
F-2086	QRX-7001	CD-4 Main Circuit Board
F-2087	QRX-7001	QS Matrix Circuit Board
F-2088	QRX-7001	QS Phase Control Circuit Board
F-2090	QRX-7001	CD-4 Sub-channel
F-2423	QRX-7001	Filter & Switch Circuit Board
F-2425	QRX-7001	Tone Control Circuit Board
F-2427	QRX-7001	Power Circuit Board
F-2428	QRX-7001	Filter & Power Supply Circuit Board
F-2431	QRX-7001	Power Supply Circuit Board
F-2436	QRX-7001	Driver Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2458	QRX-7001	Equalizer Circuit Board
F-2475	QRX-777	CD-4 Sub-channel
F-2506	BA-2000	Input Terminal board
F-2507	BA-3000	Driver Board
F-2508	BA-3000	
F-2511	BA-3000	Protection Board
F-2512	BA-3000	
F-2513	BA-3000	Subsonic Filter Board
F-2514	BA-2000	Meter Amp circuit board
F-2515	AU-20000	Meter Driver Board
	BA-3000	Meter Driver Board
	BA-5000	Meter Driver Board
F-2544	9090DB	Tone Control Circuit Board
F-2549	9090DB	FM, AM Tuner Circuit Board
F-2581	BA-2000	

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2597	100	Connector Circuit Board
F-2614	7070	Tuner Circuit Board
F-2615	7070	Muting Circuit Board
F-2617	9090DB	Mic AMP Circuit board
F-2619	9090DB	Power Supply RF Circuit board
F-2620	7070	Equalizer & Mic Circuit Board
F-2621	7070	Accessory Switch Circuit Board
F-2622	7070	Tone Control Circuit Board
F-2623	7070	Filter Circuit Board
F-2624	7070	Driver Circuit Board
	9090DB	Driver Circuit Board
F-2625	7070	Power Supply Circuit Board
F-2626	7070	Power Supply Circuit Board
F-2627	7070	Illumination Circuit Board
	9090DB	Illumination Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2629	BA-2000	Power Supply Circuit board
F-2630	BA-2000	Power Supply Board for Drivers
F-2631	BA-2000	Level-volume and meter circuit board
F-2653	9090DB	Equalizer Circuit board
F-2654	9090DB	Push Switch Circuit board
F-2655	9090DB	Dolby NR Circuit board
F-2656	9090DB	Power Supply Circuit board
F-2657	9090DB	Power Relay Circuit board
F-2661	BA-2000	Driver Board
F-2663	AU-717	Power Supply & Protector Circuit Board
F-2665	AU-717	Bass & Treble Volume Circuit Board
F-2666	AU-717	Turn Over Switch Circuit Board
F-2667	AU-517	Tape Play Circuit Board
	AU-717	Tape Play Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2670	AU-517	Pre-Main Switch Circuit Board
	AU-717	Pre-Main Switch Circuit Board
F-2673	AU-417	Control AMP Circuit Board
	AU-517	Control AMP Circuit Board
F-2674	AU-417	Tone Control Circuit Board
	AU-517	Tone Control Circuit Board
F-2675	AU-517	Power Supply & Protector Circuit Board
F-2678	TU-717	
F-2679	TU-717	
F-2680	TU-717	
F-2681	TU-717	
F-2699	AU-517	Input Terminal Circuit Board
	AU-717	Input Terminal Circuit Board
F-2703	TU-717	
F-2714	G-8000	Front-End Pack Circuit Board
	G-9000	Front-End Pack Circuit Board
F-2720	AU-717	Tone Control Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2721	AU-417	L-CH Driver Circuit Board
	AU-517	L-CH Driver Circuit Board
	AU-717	L-CH Driver Circuit Board
F-2722	AU-417	R-CH Driver Circuit Board
	AU-517	R-CH Driver Circuit Board
	AU-717	R-CH Driver Circuit Board
F-2723	AU-417	Equalizer AMP Circuit Board
	AU-517	Equalizer AMP Circuit Board
	AU-717	Equalizer AMP Circuit Board
F-2730	TU-717	
F-2769	AU-X1	Circuit Board
F-2770	AU-X1	Equalizer AMP L-CH Circuit Board
F-2771	AU-X1	Equalizer AMP R-CH Circuit Board
F-2772	AU-X1	MC, MM Mother Circuit Board
F-2773	AU-X1	Muting Circuit Board
F-2774	AU-X1	Buffer AMP Circuit Board
F-2775	AU-X1	Driver AMP Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2776	AU-X1	Selector Switch Circuit Board
F-2777	AU-X1	MC, MM Switch Circuit Board
F-2778	AU-X1	Regulated Power Supply Circuit Board
F-2779	AU-X1	Circuit Board
F-2780	AU-X1	Circuit Board
F-2781	AU-X1	Power Supply & Protector Circuit Board
F-2794	G-8000	Input Terminal Circuit Board
	G-9000	Input Terminal Circuit Board
F-2795	G-8000	Mic AMP Circuit Board
	G-9000	Mic AMP Circuit Board
F-2796	G-9000	Equalizer AMP Circuit Board
F-2797	G-8000	FM Accessory SW Circuit Board
	G-9000	FM Accessory SW Circuit Board
F-2798	G-8000	Equalizer AMP Circuit Board
F-2799	G-8000	Tone Control Circuit Board
	G-9000	Tone Control Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2800	G-8000	Volume Circuit Board
	G-9000	Volume Circuit Board
F-2801	G-9000	Tone SW Circuit Board
F-2802	G-8000	Tone SW Circuit Board
F-2806	G-8000	Driver AMP Circuit Board
	G-9000	Driver AMP Circuit Board
F-2807	G-8000	Power Supply (R) Circuit Board
	G-9000	Power Supply (R) Circuit Board
F-2808	G-8000	Power Supply (L) Circuit Board
	G-9000	Power Supply (L) Circuit Board
F-2809	G-8000	AF Power Supply and Protector Circuit Board
	G-9000	AF Power Supply and Protector Circuit Board
F-2810	G-8000	RF Power Supply Circuit Board
	G-9000	RF Power Supply Circuit Board
F-2811	G-8000	Indicator Circuit Board
	G-9000	Indicator Circuit Board
F-2812	G-8000	Selector Indicator Circuit Board
	G-9000	Selector Indicator Circuit Board
F-2814	G-8000	Driver Connection Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
	G-9000	Driver Connection Circuit Board
F-2819	AU-X1	Flat AMP Circuit Board
F-2820	AU-X1	Speakers Relay Circuit Board
F-2830	AU-819	Power supply for power amplifier section
F-2831	AU-819	Power supply for pre-amp.
F-2832	AU-819	Loudness,Jump,tone defeat circuit board
F-2833	AU-919	MC head amp. circuit board
F-2834	AU-819	Input terminal board
F-2835	AU-819	Equalizer amp. circuit board
	AU-919	Equalizer amp. circuit board
F-2839	AU-819	Driver amp. circuit board
	AU-919	Driver amp. circuit board
F-2840	AU-819	Protector circuit board
	AU-919	Protector circuit board
F-2841	AU-819	Flat amp. circuit board
	AU-919	Flat amp. circuit board
F-2842		

Circuit Board Reference - By Board

Board Number	Model	Board Description
	AU-819	Tone control board
F-2843		
	AU-919	Turn over circuit board
F-2844		
	AU-919	Power supply for pre-amp section
F-2845		
	AU-919	Power supply circuit board
F-2870		
	TU-919	Tuner circuit board
F-2871		
	TU-919	Digital Display Circuit board
F-2872		
	TU-919	AM, FM Band Width switch board
F-2875		
	TU-919	Buffer Amp board
F-2876		
	TU-919	Power Supply circuit board
F-2910		
	AU-519	Equalizer circuit board
F-2911		
	AU-417	Input Terminal Circuit Board
F-2912		
	AU-519	Pre-main terminal
F-2913		
	AU-519	Tone control amp. circuit board
F-2914		
	AU-519	Tone control circuit board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-2917	AU-X1	MC Head AMP L-CH Circuit Board
F-2918	AU-X1	MC Head AMP R-CH Circuit Board
F-2919	G-8000	Tuner Circuit Board
F-2920	G-9000	Tuner Circuit Board
F-2921	AU-417	Tape Play Circuit Board
	AU-519	Tape Play Circuit Board
F-2926	AU-519	Left Ch Driver Circuit Board
	AU-719	Left Ch Driver Circuit Board
F-2927	AU-519	Right Ch Driver Circuit Board
	AU-719	Right Ch Driver Circuit Board
F-2928	AU-919	Rectifier board
F-2989	AU-519	Input terminal circuit board
F-2995	AU-819	MC head amp. circuit board
F-2996	AU-819	Connection circuit board
F-3010	TU-919	Pre Scaler Circuit Board
F-3043		

Circuit Board Reference - By Board

Board Number	Model	Board Description
	AU-417	Power Supply & Protector Circuit Board
F-3094	AU-719	
F-3095	AU-719	Head Amp Circuit Board
F-3096	AU-719	
F-3098	AU-719	Control Amp Circuit Board
F-3099	AU-719	
F-3100	AU-719	
F-3101	AU-719	Protector Circuit Board
F-3166	SE-7	
F-3167	SE-7	
F-4606	C-2101	Equalizer AMP and Flat AMP Circuit Board
F-4610	C-2101	Input Selector Circuit Board
F-4611	C-2101	Selector Control Circuit Board
F-4612	C-2101	Master Volume Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-4613	C-2101	REC Selector Circuit Board
F-4614	C-2101	LED Circuit Board
F-4615	C-2101	Phones Jack Circuit Board
F-4616	C-2101	Rec Selector Indicator Circuit Board
F-4617	C-2101	Power Indicator Circuit Board
F-4618	B-2101	Drive AMP Circuit Board
F-4619	B-2101	Power AMP Circuit Board
F-4620	B-2101	Protector Circuit Board
F-4622	B-2101	Peak Power Display Circuit Board
F-4623	B-2101	Speaker Switch Circuit Board
F-4624	B-2101	Control Circuit Board
F-4625	B-2101	Input Terminal Circuit Board
F-4626	B-2101	Power Supply Circuit Board
F-4627	B-2101	Power Supply Circuit Board

Circuit Board Reference - By Board

Board Number	Model	Board Description
F-4628	B-2101	AC Fuse Circuit Board
F-4731	B-2101	Power Indicator Circuit Board
G-1242	SC-1330	
G-1243	SC-1330	
G-1244	SC-1330	
G-1261	SC-1330	
G-1265	SC-1330	