

# Service Manual

SU-8055/K

Stereo Integrated DC Amplifier

## SU-8055

(X), (XA), (XAL), (XGH),  
(E), (EG), (XE), (EB), (XGF)

## SU-8055K

(X), (XA), (XAL), (XGH),  
(E), (EG), (EB)

SU-8055

A02111



SU-8055K

- \* The models SU-8055 (X, XA) and SU-8055K (X, XA) are available in Asia, Latin America, Middle East and Africa only.
- \* The models SU-8055 (XAL) and SU-8055K (XAL) are available in Australia only.
- \* The models SU-8055 (XGH) and SU-8055K (XGH) are available in Holland only.
- \* The models SU-8055 (E, EG) and SU-8055K (E, EG) are available in Scandinavia and European only.
- \* The model SU-8055 (XE) is available in United Kingdom only.
- \* The models SU-8055 (EB) and SU-8055K (EB) are available in Belgium only.
- \* The model SU-8055 (XGF) is available in France only.

### TECHNICAL SPECIFICATIONS

Specifications are subject to change without notice for further improvement.

[DIN 45 500]

#### AMPLIFIER SECTION

1 kHz continuous power output both channels driven	2 x 56 W (4Ω), 2 x 50 W (8Ω)
40 Hz ~ 16 kHz continuous power output both channels driven	2 x 48 W (4Ω), 2 x 47 W (8Ω)
20 Hz ~ 20 kHz continuous power output both channels driven	2 x 48 W (4Ω), 2 x 47 W (8Ω)
Power bandwidth both channels driven, -3 dB	5 Hz ~ 30 kHz (4Ω) 5 Hz ~ 40 kHz (8Ω)
Total harmonic distortion rated power at 1 kHz	0.03% (4Ω), 0.02% (8Ω)
rated power at 40 Hz ~ 16 kHz	0.03% (4Ω), 0.02% (8Ω)
rated power at 20 Hz ~ 20 kHz	0.03% (4Ω), 0.02% (8Ω)
half power at 20 Hz ~ 20 kHz	0.01% (8Ω)
half power at 1 kHz	0.008% (8Ω)
-26 dB power at 1 kHz	0.15% (4Ω)
50mW power at 1 kHz	0.2% (4Ω)
Intermodulation distortion rated power at 250 Hz: 8 kHz = 4:1, 4Ω	0.03%
rated power at 60 Hz: 7 kHz = 4:1, SMPTE, 8Ω	0.02%
Residual hum & noise	0.8 mV (0.8 mV, IHF, A)
Damping factor	18 (4Ω), 36 (8Ω)
Input sensitivity and impedance	
PHONO MM	2.5 mV/47 kΩ
PHONO MC	170 μV/100Ω
TUNER, AUX	150 mV/47 kΩ
TAPE 1, REC/PLAY	180 mV/33 kΩ
TAPE 2	150 mV/33 kΩ
PHONO maximum input voltage (1 kHz, RMS)	MM 150 mV MC 6.5 mV

S/N rated power at 4 Ω	PHONO MM	73 dB (IHF, A: 85 dB)
	PHONO MC	60 dB (IHF, A: 66 dB)
	TUNER, AUX	86 dB (IHF, A: 97 dB)
-26 dB power at 4 Ω	PHONO MM	62 dB
	PHONO MC	58 dB
	TUNER, AUX	63 dB
50 mW power at 4 Ω	PHONO MM	58 dB
	PHONO MC	56 dB
	TUNER, AUX	60 dB
Frequency response	PHONO	RIAA standard curve 30 Hz ~ 15 kHz, ±0.5 dB
	TUNER, AUX, TAPE	20 Hz ~ 20 kHz, ±0.5 dB 10 Hz ~ 60 kHz, -1 dB 50 Hz, +10 dB ~ -10 dB 20 kHz, +10 dB ~ -10 dB
Tone controls	BASS	50 Hz, +10 dB ~ -10 dB
	TREBLE	20 kHz, +10 dB ~ -10 dB
High filter		7 kHz, -6 dB/oct
Subsonic filter		30 Hz, -6 dB/oct
Loudness control (volume at -30 dB)		50 Hz, +9 dB
Output voltage and impedance	REC OUT	150 mV
	REC/PLAY	30 mV/82 kΩ
Channel balance (250 Hz ~ 6300 Hz), AUX		±1.0 dB
Channel separation at 1 kHz, AUX		60 dB
Headphones output level and impedance		440 mV/330Ω
Load impedance	MAIN or REMOTE	4 ~ 16Ω
	MAIN + REMOTE	8 ~ 16Ω

#### GENERAL

Power consumption	500 W
Power supply (50 Hz/60 Hz)	110V/120V/220V/240V
Dimensions (W x H x D)	430 x 142 x 255 mm
Weight	7.7 kg

# Technics

Matsushita Electric Trading Co., Ltd.  
P.O. Box 288, Central Osaka Japan

## TECHNISCHE DATEN [DIN 45 500]

Spezifikationen können infolge von Verbesserungen ohne Ankündigung geändert werden.

### VERSTÄRKERTEIL

<b>RMS-Dauerleistung bei 1 kHz</b> beide Kanäle zusammen angesteuert	2 x 56 W (4Ω) 2 x 50 W (8Ω)
<b>RMS-Dauerleistung bei 40 Hz ~ 16 kHz</b> beide Kanäle zusammen angesteuert	2 x 48 W (4Ω) 2 x 47 W (8Ω)
<b>RMS-Dauerleistung bei 20 Hz ~ 20 kHz</b> beide Kanäle zusammen angesteuert	2 x 48 W (4Ω), 2 x 47 W (8Ω)
<b>Leistungsbandbreite</b> beide Kanäle zusammen angesteuert, -3 dB	5 Hz ~ 30 kHz (4Ω) 5 Hz ~ 40 kHz (8Ω)
<b>Harmonische Verzerrungen</b>	
Nennausgangsleistung bei 1 kHz	0,03% (4Ω), 0,02% (8Ω)
Nennausgangsleistung bei 40 Hz ~ 16 kHz	0,03% (4Ω), 0,02% (8Ω)
Nennausgangsleistung bei 20 Hz ~ 20 kHz	0,03% (4Ω), 0,02% (8Ω)
Halber Ausgangsleistung bei 20 Hz ~ 20 kHz	0,01% (8Ω)
Halber Ausgangsleistung bei 1 kHz	0,008% (8Ω)
-26 dB Ausgangsleistung bei 1 kHz	0,15% (4Ω)
50 mW Ausgangsleistung bei 1 kHz	0,2% (4Ω)
<b>Intermodulationsverzerrung</b>	
Nennausgangsleistung bei 250 Hz: 8 kHz = 4:1, 4Ω	0,03%
Nennausgangsleistung bei 60 Hz: 7 kHz = 4:1, 8Ω	0,02%
<b>Brummen &amp; Rauschen</b>	0,8 mV (0,8 mV, IHF A)
<b>Dämpfungsfaktor</b>	18 (4Ω), 36 (8Ω)
<b>Eingangsempfindlichkeit &amp; Impedanz</b>	
PHONO MM	2,5 mV/47 kΩ
PHONO MC	170 μV/100Ω
TUNER, AUX	150 mV/47 kΩ
TAPE 1, REC/PLAY	180 mV/33 kΩ
TAPE 2	150 mV/33 kΩ
<b>PHONO Maximale Eingangsspannungen (1 kHz RMS)</b>	
MM	150 mV
MC	6,5 mV

### Fremdspannungsabstand

<b>Nennausgangsleistung bei 4Ω</b>	PHONO MM	73 dB (IHF, A: 85 dB)
	PHONO MC	60 dB (IHF, A: 66 dB)
	TUNER, AUX	86 dB (IHF, A: 97 dB)
<b>-26 dB Ausgangsleistung bei 4Ω</b>	PHONO MM	62 dB
	PHONO MC	58 dB
	TUNER, AUX	63 dB
<b>50 mW Ausgangsleistung bei 4Ω</b>	PHONO MM	58 dB
	PHONO MC	56 dB
	TUNER, AUX	60 dB
<b>Frequenzgang</b>	PHONO	RIAA Standardkurve
		30 Hz ~ 15 kHz, ±0,5 dB
	TUNER, AUX, TAPE	20 Hz ~ 20 kHz, ±0,5 dB
		10 Hz ~ 60 kHz, -1 dB
<b>Klangregler</b>	BÄSSE	50 Hz, +10 dB ~ -10 dB
	HÖHEN	20 kHz, +10 dB ~ -10 dB
<b>Höhenfilter (HIGH)</b>		7 kHz, -6 dB/oct
<b>Entzerrungs Unterschalifilter</b>		30 Hz, -6 dB/oct
<b>Gehörgerechte Lautstärkekorrektur (Lautstärke bei -30 dB)</b>		50 Hz, +9 dB
<b>Ausgangsspannungen &amp; Impedanz</b>	REC OUT	150 mV
	REC/PLAY	30 mV/82 kΩ
<b>Kanalabweichung (250 Hz ~ 6300 Hz), AUX</b>		±1,0 dB
<b>Kanaltrennung bei 1 kHz, AUX</b>		60 dB
<b>Kopfhörerpegel und Ausgangsimpedanz</b>		440 mV/330Ω
<b>Lautsprecher-Ausgangsimpedanz</b>		
	MAIN oder REMOTE	4 ~ 16Ω
	MAIN und REMOTE	8 ~ 16Ω

### ALLGEMEINE DATEN

<b>Leistungsaufnahme</b>	500 W
<b>Netzspannung umschaltbar (50 Hz/60 Hz)</b>	110V/120V/220V/240V
<b>Abmessungen (B x H x T)</b>	430 x 142 x 255 mm
<b>Gewicht</b>	7,7 kg

## CARACTERISTIQUES TECHIQUES [DIN 45 500]

Sujet à changement sans préavis.

### PARTIE AMPLIFICATEUR

<b>Puissance RMS (continue) à 1 kHz</b> pour l'ensemble des canaux excités	2 x 56 W (4Ω) 2 x 50 W (8Ω)
<b>Puissance RMS (continue) à 40 Hz ~ 16 kHz</b> pour l'ensemble des canaux excités	2 x 48 W (4Ω) 2 x 47 W (8Ω)
<b>Puissance RMS (continue) à 20 Hz ~ 20 kHz</b> pour l'ensemble des canaux excités	2 x 48 W (4Ω), 2 x 47 W (8Ω)
<b>Largeur de bande de puissance</b> pour l'ensemble des canaux excités, -3 dB	5 Hz ~ 30 kHz (4Ω) 5 Hz ~ 40 kHz (8Ω)
<b>Distorsion harmonique totale</b>	
pour la puissance mesurée à 1 kHz	0,03% (4Ω), 0,02% (8Ω)
pour la puissance mesurée à 40 Hz ~ 16 kHz	0,03% (4Ω), 0,02% (8Ω)
pour la puissance mesurée à 20 Hz ~ 20 kHz	0,03% (4Ω), 0,02% (8Ω)
pour la demi-puissance mesurée à 20 Hz ~ 20 kHz	0,01% (8Ω)
pour la demi-puissance mesurée à 1 kHz	0,008% (8Ω)
pour une puissance mesurée de -26 dB, 1 kHz	0,15% (4Ω)
pour une puissance mesurée de 50 mW, 1 kHz	0,2% (4Ω)
<b>Distorsion d'intermodulation</b>	
pour la puissance mesurée à 250 Hz: 8 kHz = 4:1, 4Ω	0,03%
pour la puissance mesurée à 60 Hz: 7 kHz = 4:1, 8Ω	0,02%
<b>Tension résiduelle de bruit</b>	0,8 mV (0,8 mV IHF A)
<b>Facteur d'amortissement</b>	18 (4Ω), 36 (8Ω)
<b>Sensibilité &amp; impédance d'entrée</b>	
PHONO MM	2,5 mV/47 kΩ
PHONO MC	170 μV/100Ω
TUNER, AUX	150 mV/47 kΩ
TAPE 1, REC/PLAY	180 mV/33 kΩ
TAPE 2	150 mV/33 kΩ
<b>Voltage d'entrée maximum (PHONO, 1 kHz, RMS)</b>	
MM	150 mV
MC	6,5 mV

### Rapport signal/bruit

<b>pour la puissance nominale, 4Ω</b>	PHONO MM	73 dB (IHF, A: 85 dB)
	PHONO MC	60 dB (IHF, A: 66 dB)
	TUNER, AUX	86 dB (IHF, A: 97 dB)
<b>pour une sortie de -26 dB, 4Ω</b>	PHONO MM	62 dB
	PHONO MC	58 dB
	TUNER, AUX	63 dB
<b>pour une sortie de 50 mW, 4Ω</b>	PHONO MM	58 dB
	PHONO MC	56 dB
	TUNER, AUX	60 dB

### Réponse de fréquence

<b>PHONO</b>	Courbe standard RIAA
	30 Hz ~ 15 kHz, ±0,5 dB
<b>TUNER, AUX, TAPE</b>	20 Hz ~ 20 kHz, ±0,5 dB
	10 Hz ~ 60 kHz, -1 dB



### Réglage de la tonalité

<b>BASS (graves)</b>	50 Hz, +10 dB ~ -10 dB
<b>TREBLE (aigus)</b>	20 kHz, +10 dB ~ -10 dB
<b>Filtrage intra acoustique compensateur</b>	30 Hz, -6 dB/oct
<b>Filtre Aigu (HIGH)</b>	7 kHz, -6 dB/oct
<b>Correction physiologique (volume à -30 dB)</b>	50 Hz, +9 dB
<b>Tension de sortie &amp; impédance</b>	REC OUT 150 mV
	REC/PLAY 30 mV/82 kΩ
<b>Equilibrage de canaux (250 Hz ~ 6300 Hz), AUX</b>	±1,0 dB
<b>Séparation des canaux, AUX 1 kHz</b>	60 dB
<b>Niveau du casque et impédance de sortie</b>	400 mV/330Ω
<b>Impédance de charge</b>	PRINCIPALE ou ELOIGNEE 4 ~ 16Ω
	PRINCIPALE + ELOIGNEE 8 ~ 16Ω


### GENERALITES

<b>Consommation</b>	500 W
<b>Alimentation (50 Hz/60 Hz)</b>	110V/120V/220V/240V
<b>Dimensions (L x H x Pr)</b>	430 x 142 x 255 mm
<b>Poids</b>	7,7 kg

**LOCATION OF CONTROLS**

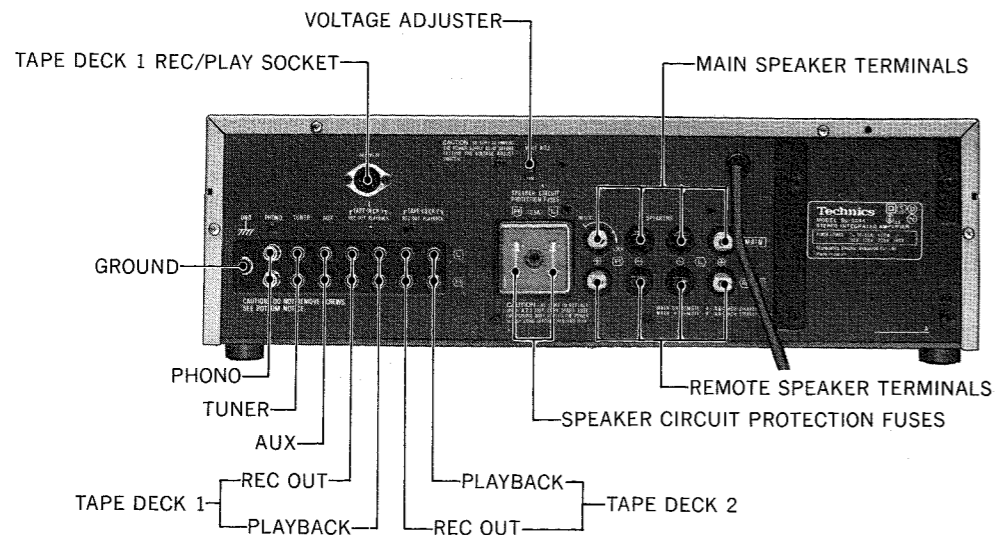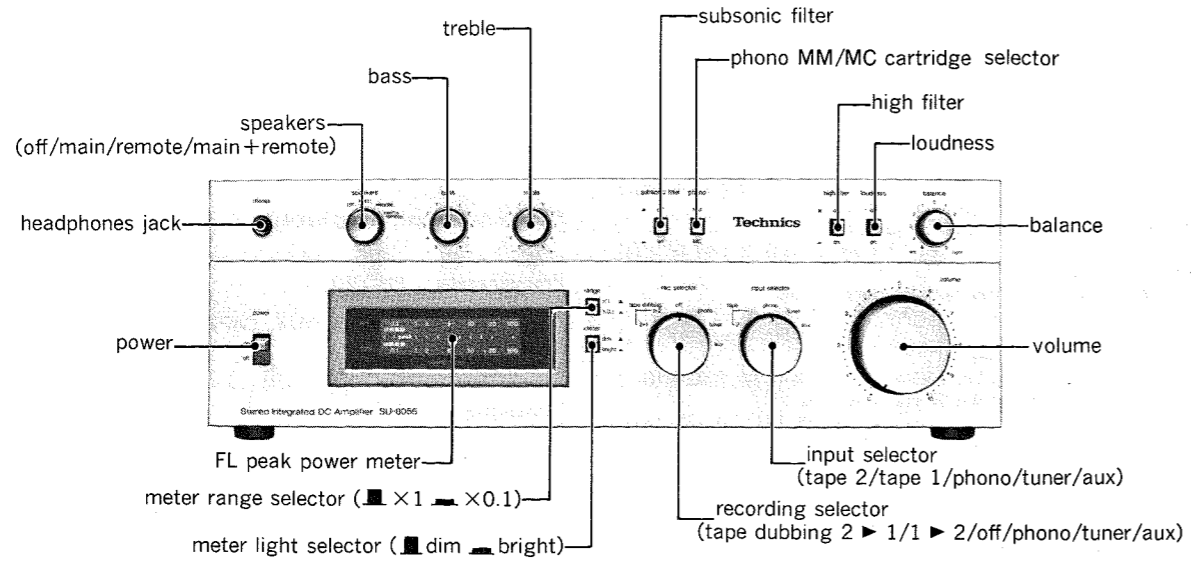

• The products for destinations (X) and (XA) are equipped with AC outlets.

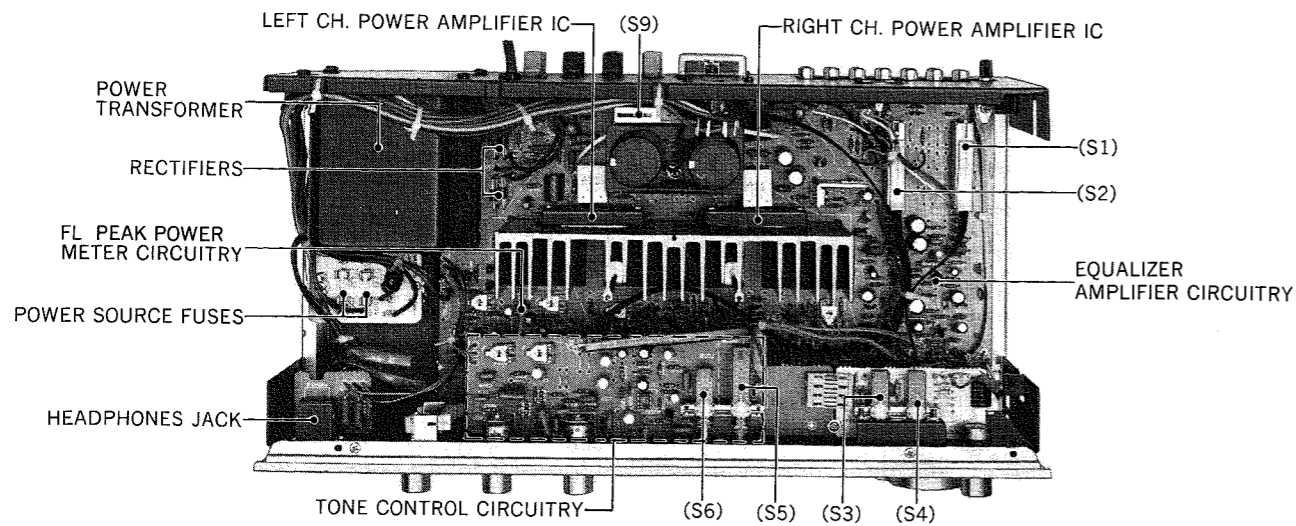

**NOTE**

The unit is provided with the speaker circuit protection fuses at the right and left channels respectively. The fuse is to prevent the power IC from destruction, should the speaker terminals be short-circuited. Accordingly, if the unit fails to function upon completion of the speaker connections, check the speaker circuit protection fuses first of all for possible blowing.

**HOW TO REMOVE THE AMPLIFIER CABINET, BOTTOM PLATE AND FRONT PANEL**

1. Remove the 4 setscrews (① ~ ④ in Fig. 1) on the side and 4 setscrews (⑤ ~ ⑧ in Photo 1) on the back of the amplifier cabinet.
2. Shift the cabinet backward and lift it upward. (Arrow A in Fig. 1)
3. When mounting the cabinet, completely fit the top lug of the cabinet with the front panel before tightening the setscrews. (See Fig. 1 [I].)

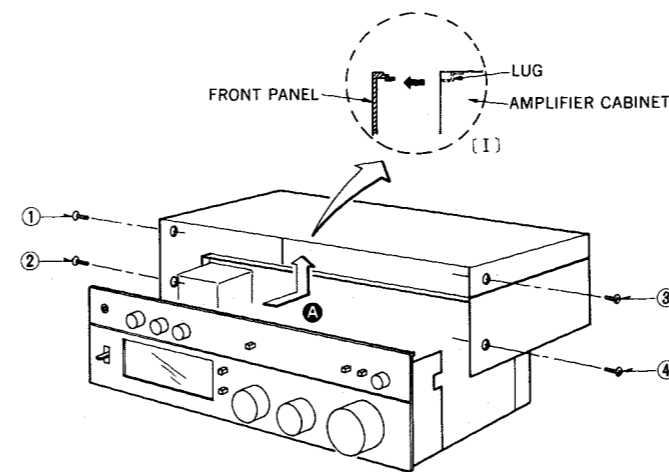


Fig. 1

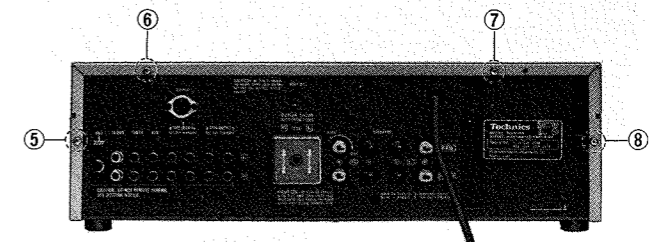


PHOTO 1

**How to detach the bottom plate**

1. Remove the 2 setscrews (⑪, ⑫ in Fig. 2) used to secure bottom plate and 4 setscrews (⑨, ⑩, ⑬, ⑭ in Fig. 2) for the legs. Then the bottom plate can be detached.

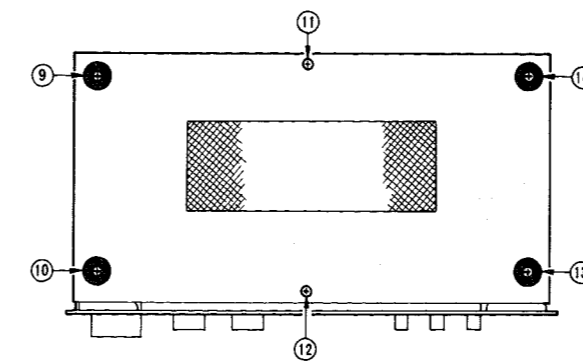


Fig. 2

**How to detach the front panel**

1. Remove the 4 setscrews (⑮ ~ ⑱ in Fig. 3) and then carefully pull the front panel toward you.


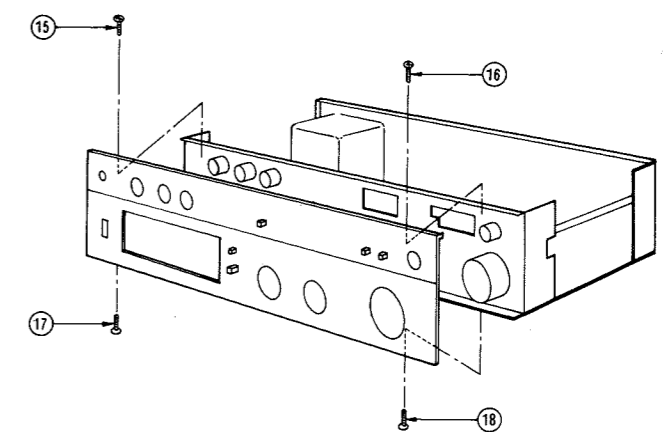


Fig. 3

BEFORE STARTING THE REPAIRING

Before adjusting or repairing, be sure to short-circuit opposite poles of the 8200µF capacitors (C501, 502) with a resistor approximately of "50Ω, 5W" for discharging the charged voltage.

Short-circuiting with a screw driver and the like is not only dangerous, but may destroy transistors and diodes, and should therefore be avoided.

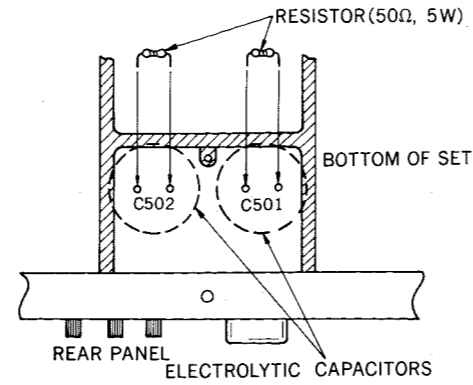

ALIGNMENT INSTRUCTIONS

ENGLISH


Setting

- Connect a low frequency oscillator to the tuner input terminal, and 8-ohm load resistor and AC electronic voltmeter to the speaker terminal.
- Add 1 kHz signal from the low frequency oscillator to the set.
- Set the sound volume to the maximum point.

Adjustment item	Meter range select switch position	Parts to be adjusted	Adjusting procedure
FL peak power meter	Range Switch... X0.1	R617 (Lch)	1. Adjust the input level so that the AC voltmeter indicates 0.7V. 2. Adjust R617 while observing the FL peak power meter so that the segment at 0.1W is about to turn on. (Fig. 4)
		R618 (Rch)	1. Adjust R618 in the same way as for Lch. If the indication of Lch changes, re-adjust R617.
	Range Switch... X1	R628 (Rch)	1. Adjust the input level so that the L-channel segment at 10 W of the FL peak power meter is about to turn on, and read the output voltage with the AC voltmeter. 2. Adjust the input level so that the R-channel output voltage becomes equal to the L-channel's one read above, then adjust R628 so that the R-channel segment at 10 W is about to turn on. (Fig. 5)
	Range Switch... X0.1	R618 (Rch)	1. Adjust the input level so that the AC voltmeter indicates 0.7V. Rotate R617 counterclockwise to turn them off. Again adjust R618 so that the segment at 0.1W is about to turn on.


Adjustment of DC unbalanced voltage

- Connect the DC electronic voltmeter to the speaker terminals of L and R channels.
- Set the power supply switch to "ON".
- Shift the range knob of the DC voltmeter to as small measuring range as possible. Then adjust R413 (Lch) and R414 (Rch) so that the voltmeter indicates 0 V.

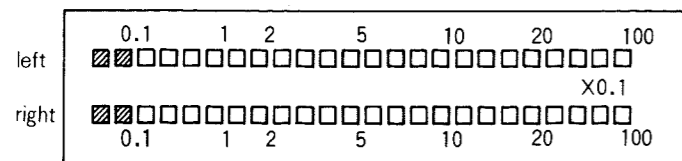

power (w/8Ω)

Fig. 4 (Abb. 4)

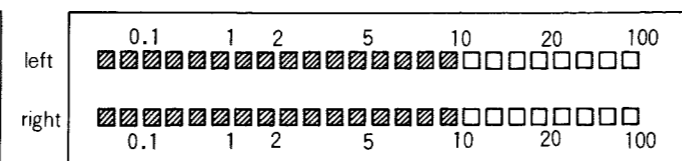

power (w/8Ω)

Fig. 5 (Abb. 5)

Einstellung

- Einen Niederfrequenzoszillator an die Eingangsklemme des Tuners schließen und parallel zu 8-ohm Belastungswiderstand den elektronischen Wechselstrom-Voltmeter an die Lautsprecherklemme schließen.
- 1 kHz Signal aus dem Niederfrequenzoszillator in das Gerät speisen.
- Lautstärkeregler auf den minimalen Punkt einstellen.

Justierung	Stellung des Meterbereichswählers	Zu justierende Teile	Justierungsvorgang
FL-Spitzenleistungsmeter	Bereichswähler auf X0.1	R617 (Linker Kanal)	1. Den Eingangspegel so justieren, daß der Wechselstrom-Voltmeter 0,7 V anzeigt. 2. Unter Beobachtung des FL-Spitzenleistungsmeters R617 so justieren, daß das Segment an 0,1 W aufzuleuchten beginnt. (Abb. 4)
		R618 (Rechter K.)	1. R618 in der gleichen Weise wie bei linkem Kanal justieren. Bei Änderung der Anzeige des linken Kanals R617 wiederjustieren.
	Bereichswähler auf X1	R628 (Rechter K.)	1. Den Eingangspegel justieren, bis der L-Kanalabschnitt bei 10 W des FL-Spitzenleistungsmeters fast einschaltet, und am Wechselstromvoltmetre die Ausgangsspannung ablesen. 2. Den Eingangspegel justieren, bis die R-Kanalausgangsspannung der oben abgelesenen des L-Kanals gleichsteht, dann R628 justieren, bis der R-Kanalabschnitt bei 10 W fast einschaltet. (Abb. 5)
	Bereichswähler auf X0.1	R618 (Rechter K.)	1. Den Eingangspegel so justieren, daß der Wechselstrom-Voltmeter 0,7 V anzeigt. R617 im Gegensinn zum Uhrzeiger drehen, bis sie erlöschen. R618 wieder so justieren, daß das Segment an 0,1 W aufzuleuchten beginnt.

Justierung der unausgeglichene Gleichstromspannung

- Den ktronischen Gleichstrom-Voltmeter an die Lautsprecherklemme des linken und rechten kanal schließen.
- Den Netzschalter auf "ON" stellen.
- Den Bereichsknopf des Gleichstrom-Voltmeters auf den möglichst kleinen Meßbereich umschalten. Dann R413 (Linker K.) und R414 (Rechter K.) so justieren, daß der Voltmeter 0 V anzeigt.

INSTRUCTIONS D'ALIGNMENT

FRANÇAIS

Réglage


- Brancher un oscillateur à basse fréquence à la borne de sortie du tuner et une résistance de charge de 8 ohms et un voltmètre électronique à la borne de l'enceinte.
- Par l'oscillateur à basse fréquence, appliquer un signal de 1 kHz à l'appareil.
- Régler le volume du son au maximum.

Elément de réglage	Position du commutateur de sélection de la gamme du compteur	Eléments à régler	Procédé de réglage
Compteur de puissance de crête de niveau de fréquence	Commutateur de gamme X0,1	R617 (CG)	1. Régler le niveau de sortie de telle sorte que la voltmètre CA indique 0,7 V. 2. Régler la R617 tout en observant le compteur de puissance de crête de niveau de fréquence, de telle sorte que le segment à 0,1 W soit sur le point d'être allumé. (Fig. 4)
		R618 (CD)	1. Régler le R618 de la même façon que pour le canal gauche (CG). Si l'indication du canal gauche est modifiée, re-régler le R617.
	Commutateur de gamme X1	R628 (CD)	1. Régler le niveau d'entrée de telle sorte que le segment du canal gauche à 10W du compteur de puissance de crête FL, soit sur le point d'être branché et lire la tension de sortie avec un voltmètre CA. 2. Régler le niveau d'entrée de telle sorte que la tension de sortie du canal droit, soit égale à celle du canal gauche lue ci-dessus, puis régler le R628 de telle sorte que le segment du canal droit à 10 W soit sur le point d'être branché. (Fig. 5)
	Commutateur de gamme X0,1	R618 (CD)	1. Régler le niveau de sortie de telle sorte que le voltmètre CA indique 0,7 V. Tourner les R617 à gauche pour les éteindre. Régler de nouveau le R618 pour que le segment de 0,1 W soit sur le point d'être allumé.

Réglage de la tension CC déséquilibrée



- Brancher un voltmètre électronique CC aux bornes de l'enceite des canaux droit et gauche.
- Placer le commutateur d'alimentation sur "ON".
- Déplacer le bouton de gamme du voltmètre CC sur la plus petite gamme de mesure possible. Puis régler le R413 (CG) et le R414 (CD) de telle sorte que le voltmètre indique 0 V.

**■ ALIGNMENT POINTS**

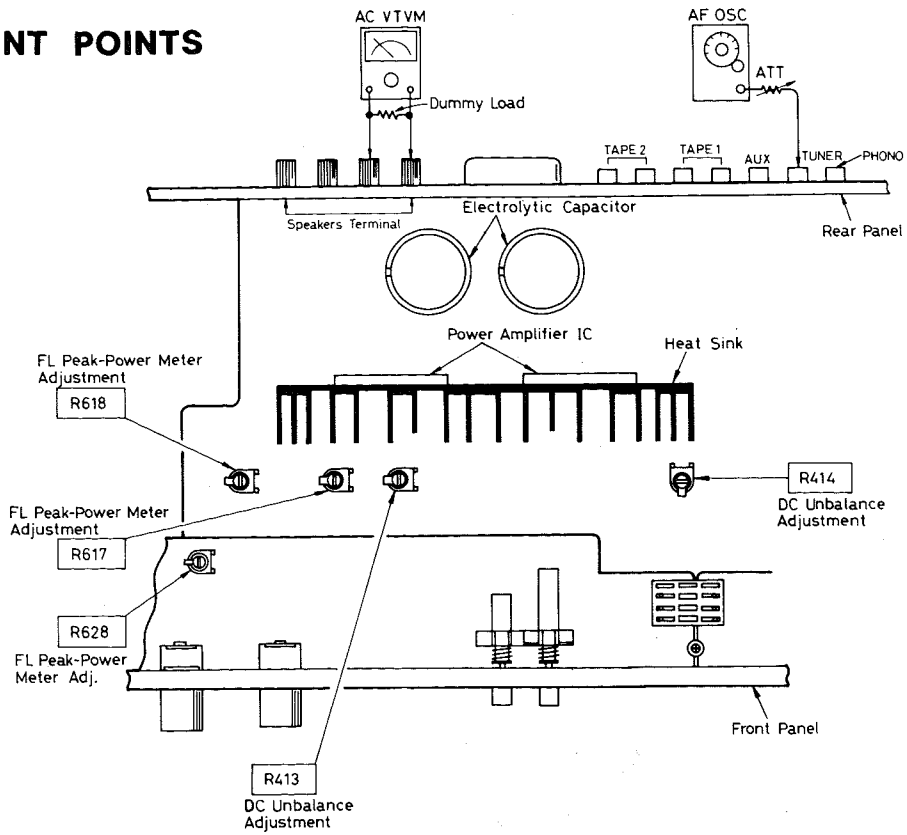


**■ HOW TO REMOVE THE POWER IC**

1. Remove the solder of power IC for both Lch and Rch.
2. Remove the 3 setscrews (① ~ ③ in Fig. 6) used to fasten the heat sink from the center bracket.
3. Remove the setscrew (④ in Fig. 6) used to fasten the heat sink from the reinforce bracket.
4. Remove the heat sink along with power IC in the direction of arrow A (Fig. 7).
5. Remove the 2 setscrews (⑥ in Fig. 7) used to secure the power IC on the heat sink, and then pull the power IC in the direction of arrow B.
6. When mounting the power IC, apply silicone compound (or equivalent heat diffuser) to the back of power IC, and then follow the steps 1 ~ 5 reversely.

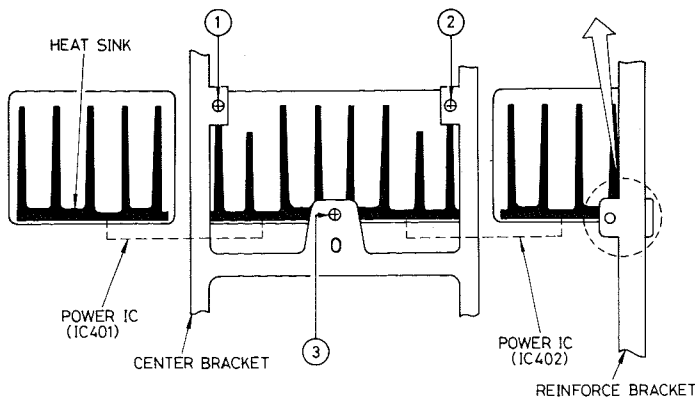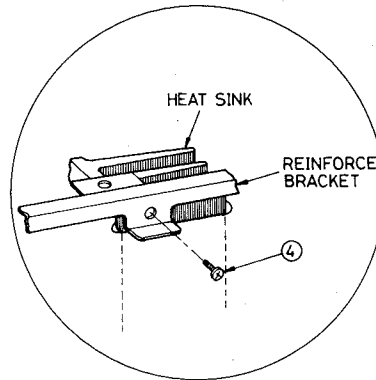


**Fig. 6**

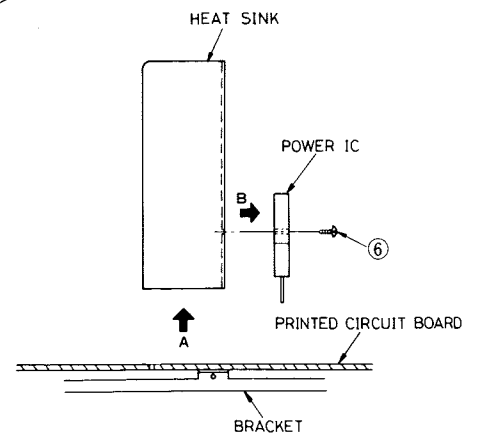


**Fig. 7**

PRINTED CIRCUIT BOARD WIRING VIEW

Earth (Ground) Lines

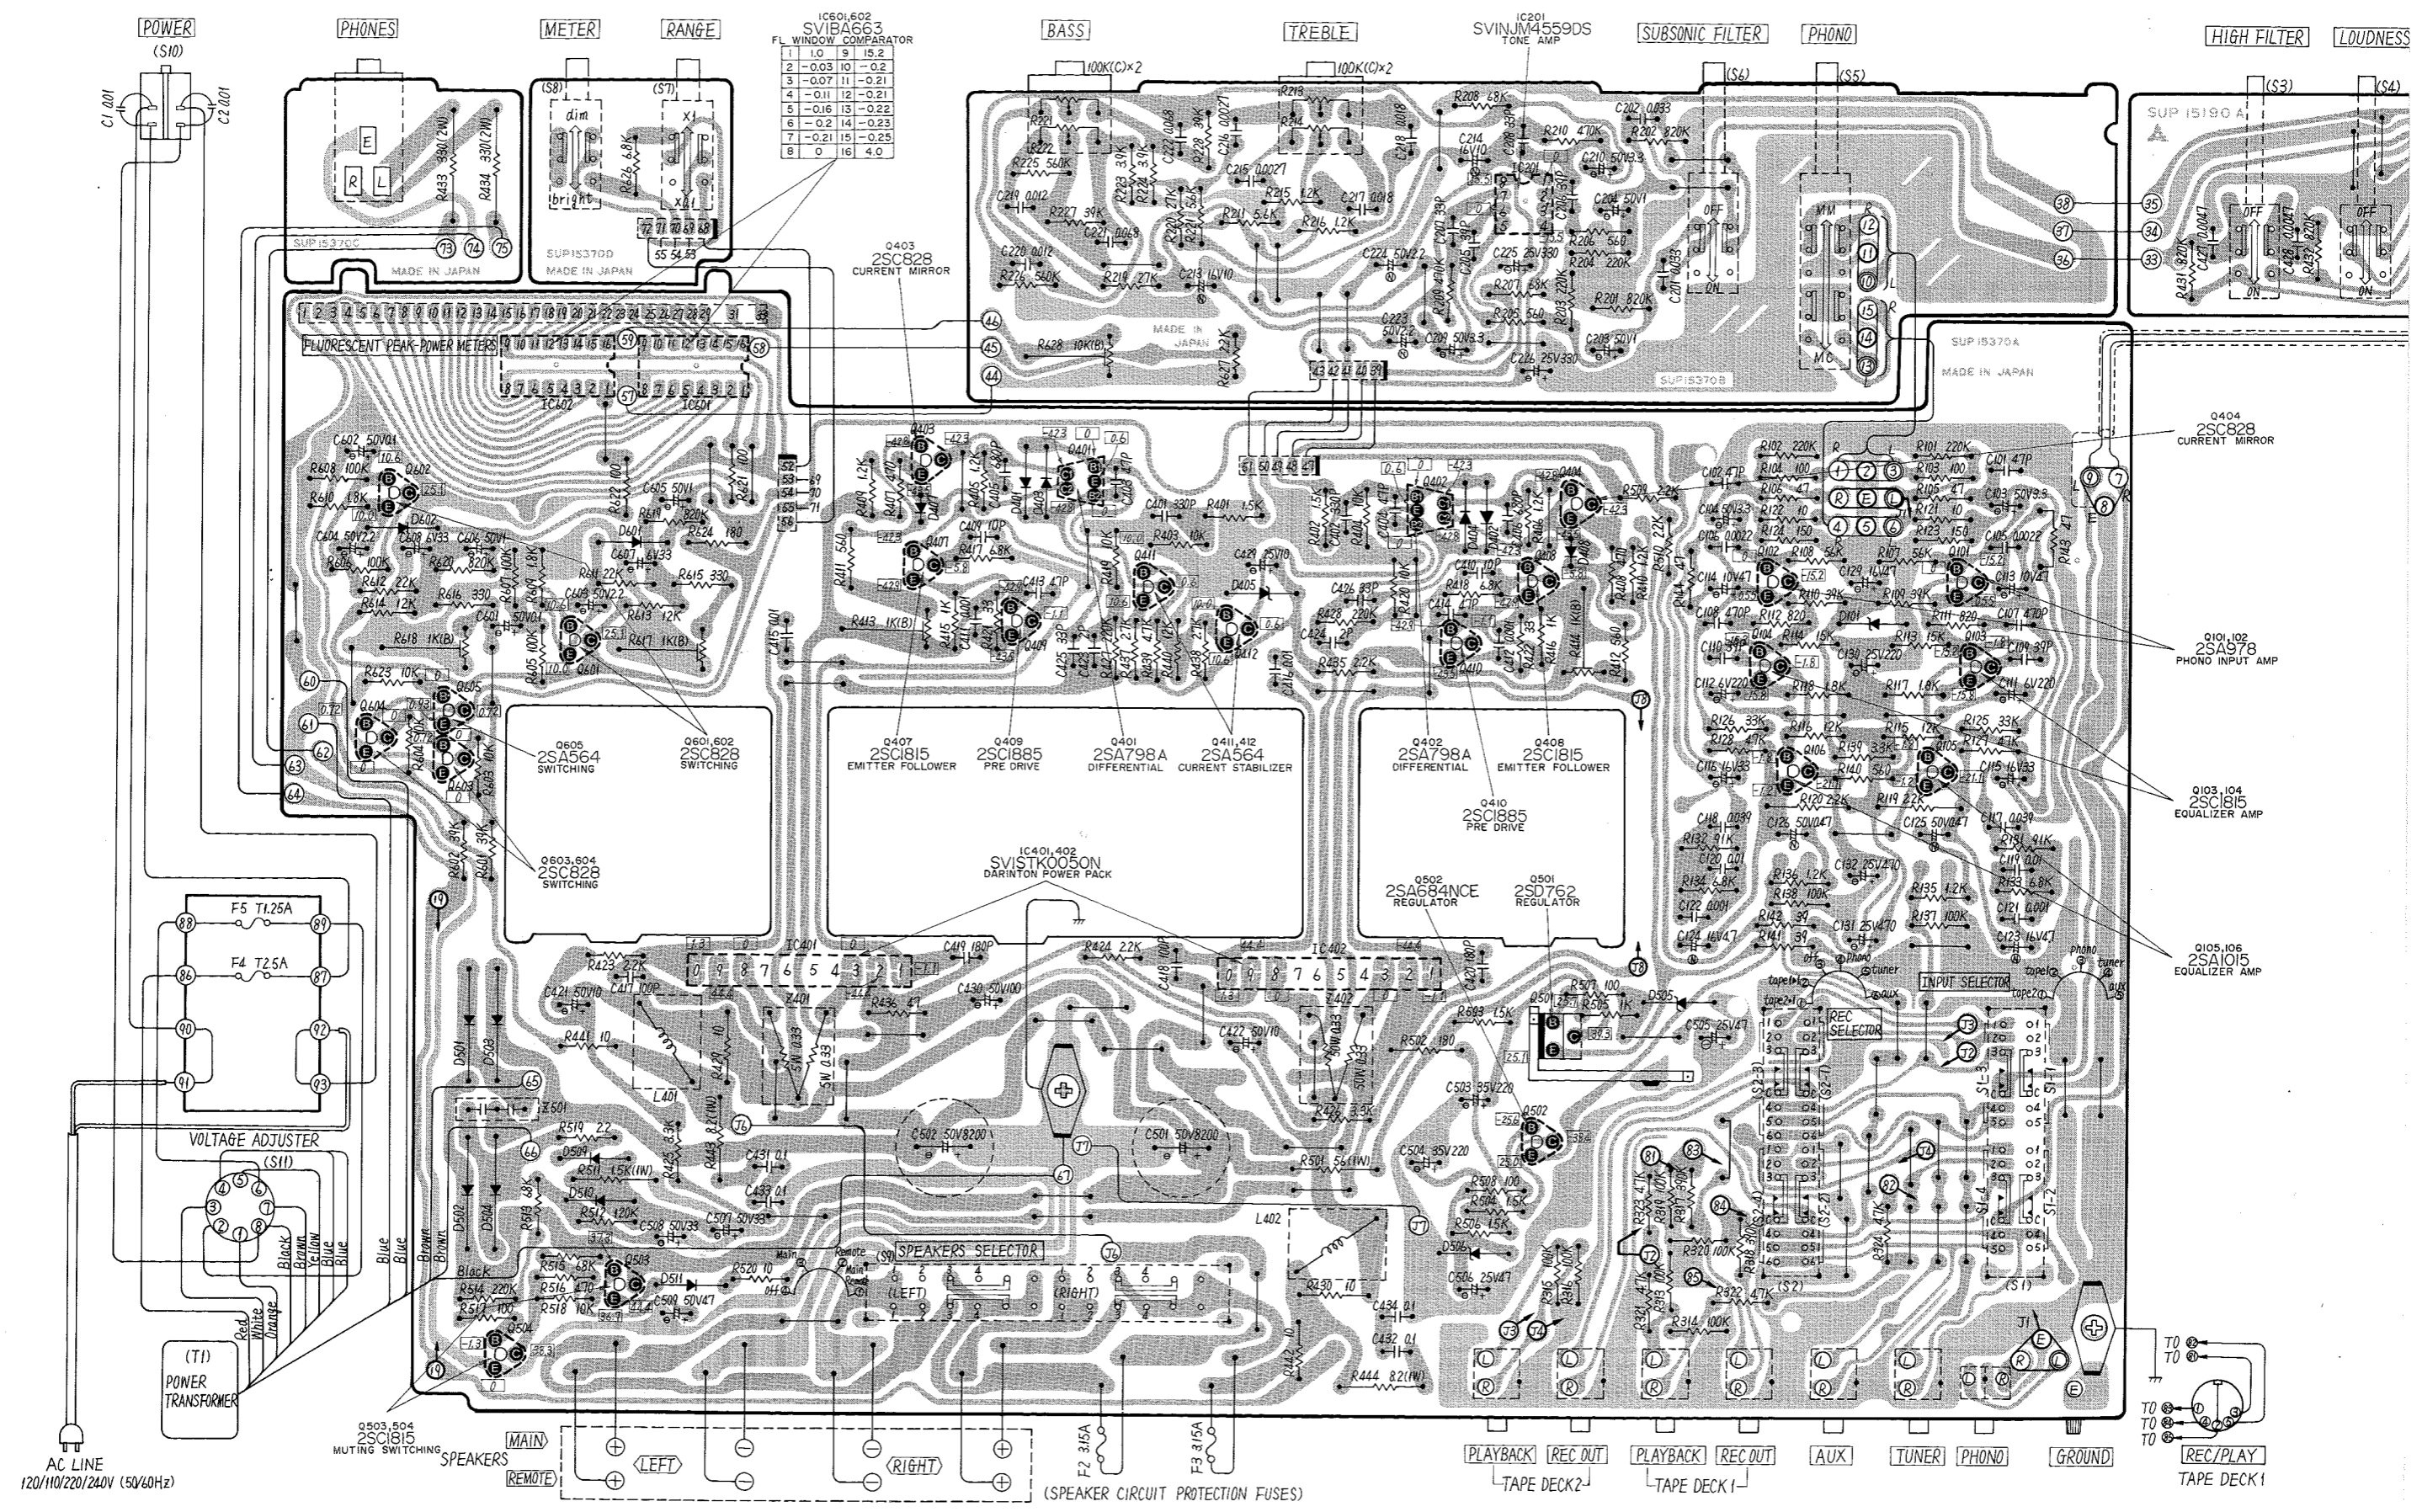


Earth (Ground) Lines

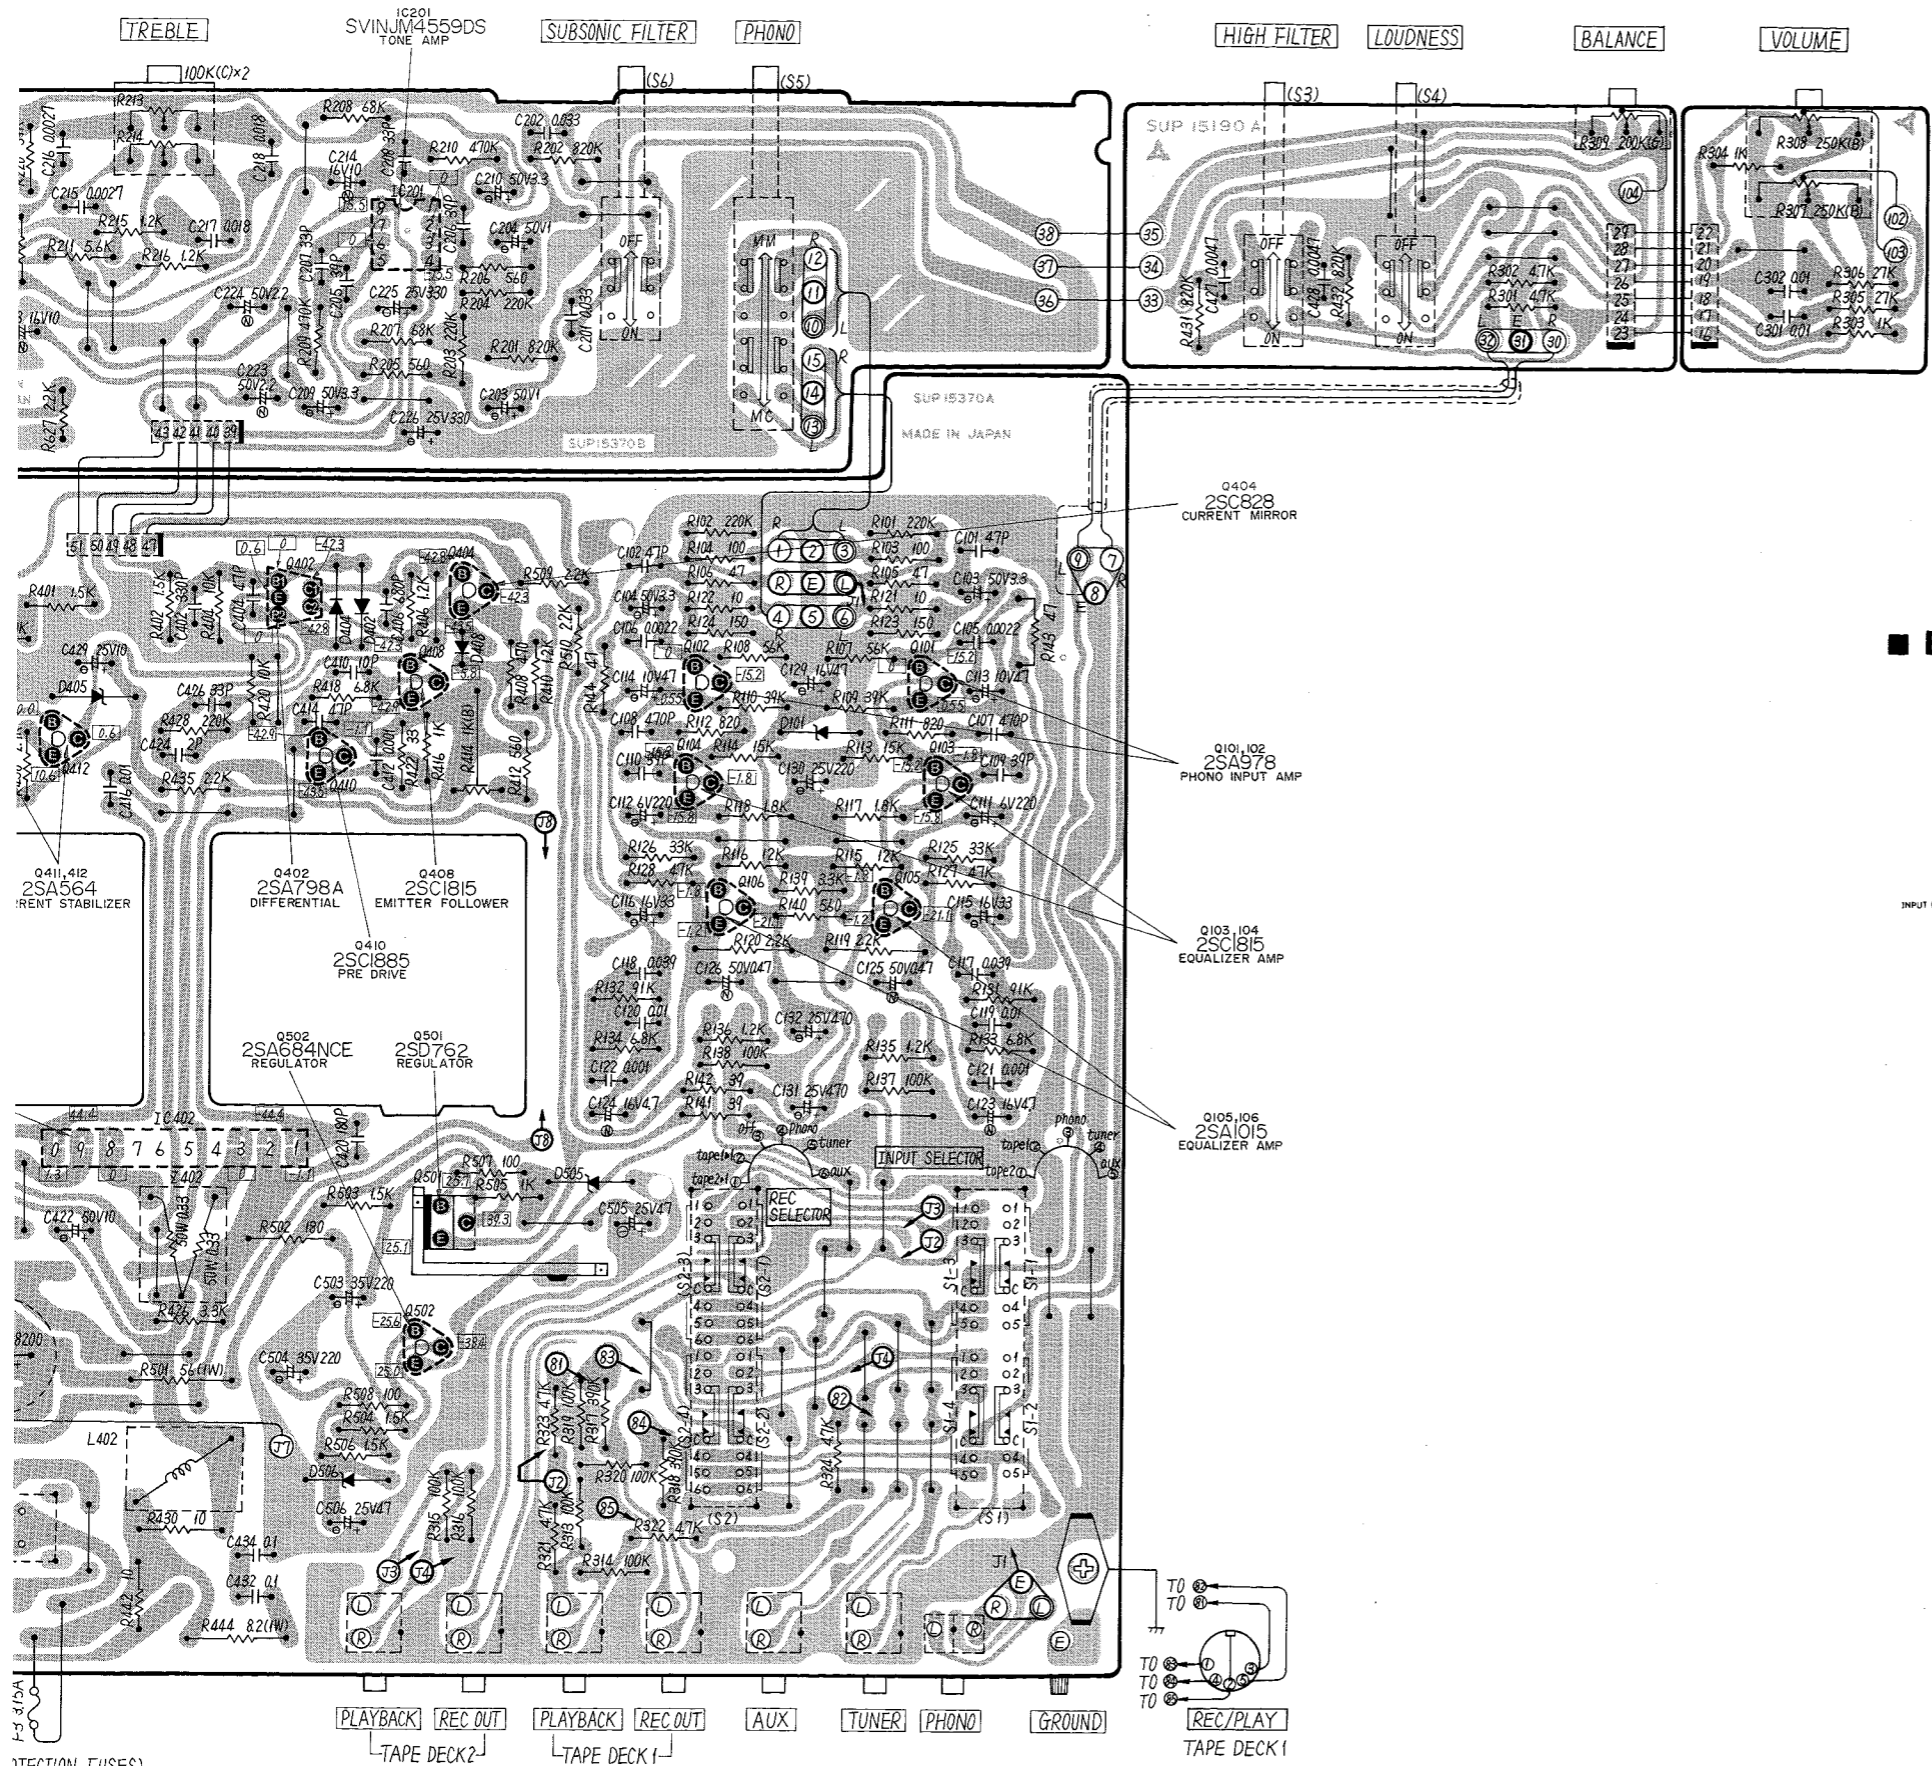

Notes:


- S1** : Input selector switch in "PHONO" position.  
① TAPE 2 ↔ ② TAPE 1 ↔ ③ PHONO ↔ ④ TUNER ↔ ⑤ AUX
- S2** : Rec selector switch in "OFF" position.  
① TAPE 2▶1 ↔ ② TAPE 1▶2 ↔ ③ OFF ↔ ④ PHONO ↔ ⑤ TUNER ↔ ⑥ AUX
- S3** : High filter switch in "OFF" position.
- S4** : Loudness switch in "OFF" position.
- S5** : Phono MM/MC cartridge selector switch in "MM" position.
- S6** : Subsonic filter switch in "OFF" position.
- S7** : Range switch in "X1" position.
- S8** : Meter light selector switch in "DIMMER" position.
- S9** : Speaker switch in "MAIN" position
- S10** : Power switch in "ON" position.
- S11** : Voltage adjuster switch in "240V" position.  
(240V ↔ 220V ↔ 120V ↔ 110V)
- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.  
□ Standards values ( ) Bright
- The **S** mark has been used for the indication of specified parts for an assurance of safety, but it has been changed to **Δ** mark. When replacing parts, be sure to use parts with correct numbers with reference to the circuit drawing or the repair parts list.  
S → Δ (new mark)
- To represent transistors, Q is used instead of TR (Ex. TR1 → Q1)
- Phono signal lines of left channel.
- This schematic diagram may be modified at any time with the development of new technology.

■ BLOCK DIAGRAM

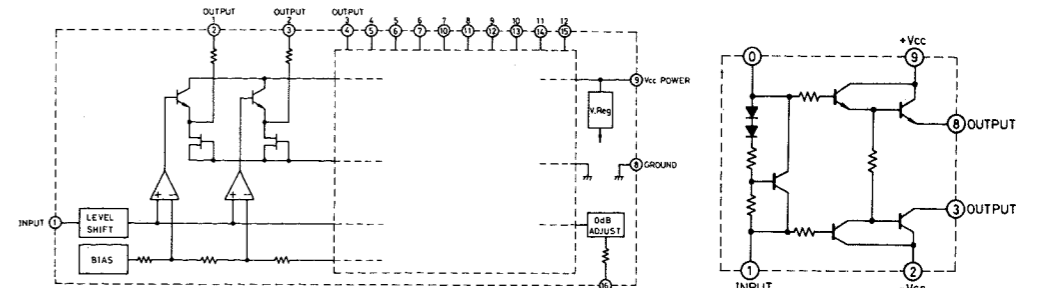

IC601, 602 (SVIBA663)  
FL Comparator


IC401, 402 (SVISTK0050N)  
Power Amplifier

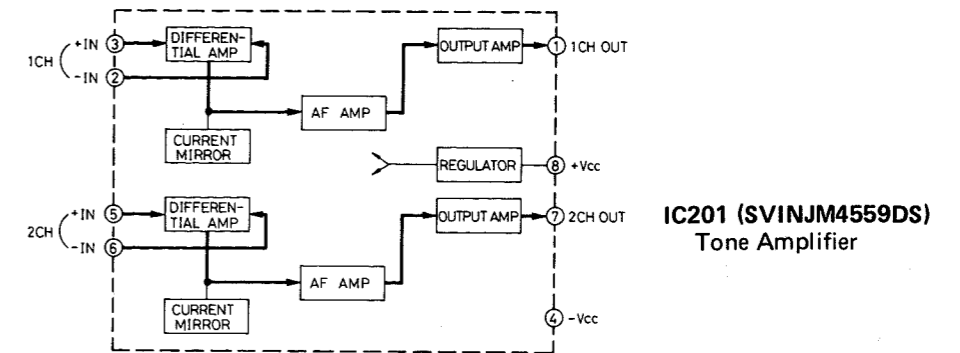



■ TERMINAL GUIDE OF TRANSISTOR & IC

<p>2SA798A</p>	<p>SVINJM4559DS</p>	<p>SVIBA663</p>	<p>2SA1015 2SC1815 2SA684NCE 2SA564 2SC828 2SC1885</p>
<p>SVISTK0050N</p>	<p>2SC1913</p>	<p>2SA978</p>	


SCHEMATIC DIAGRAM

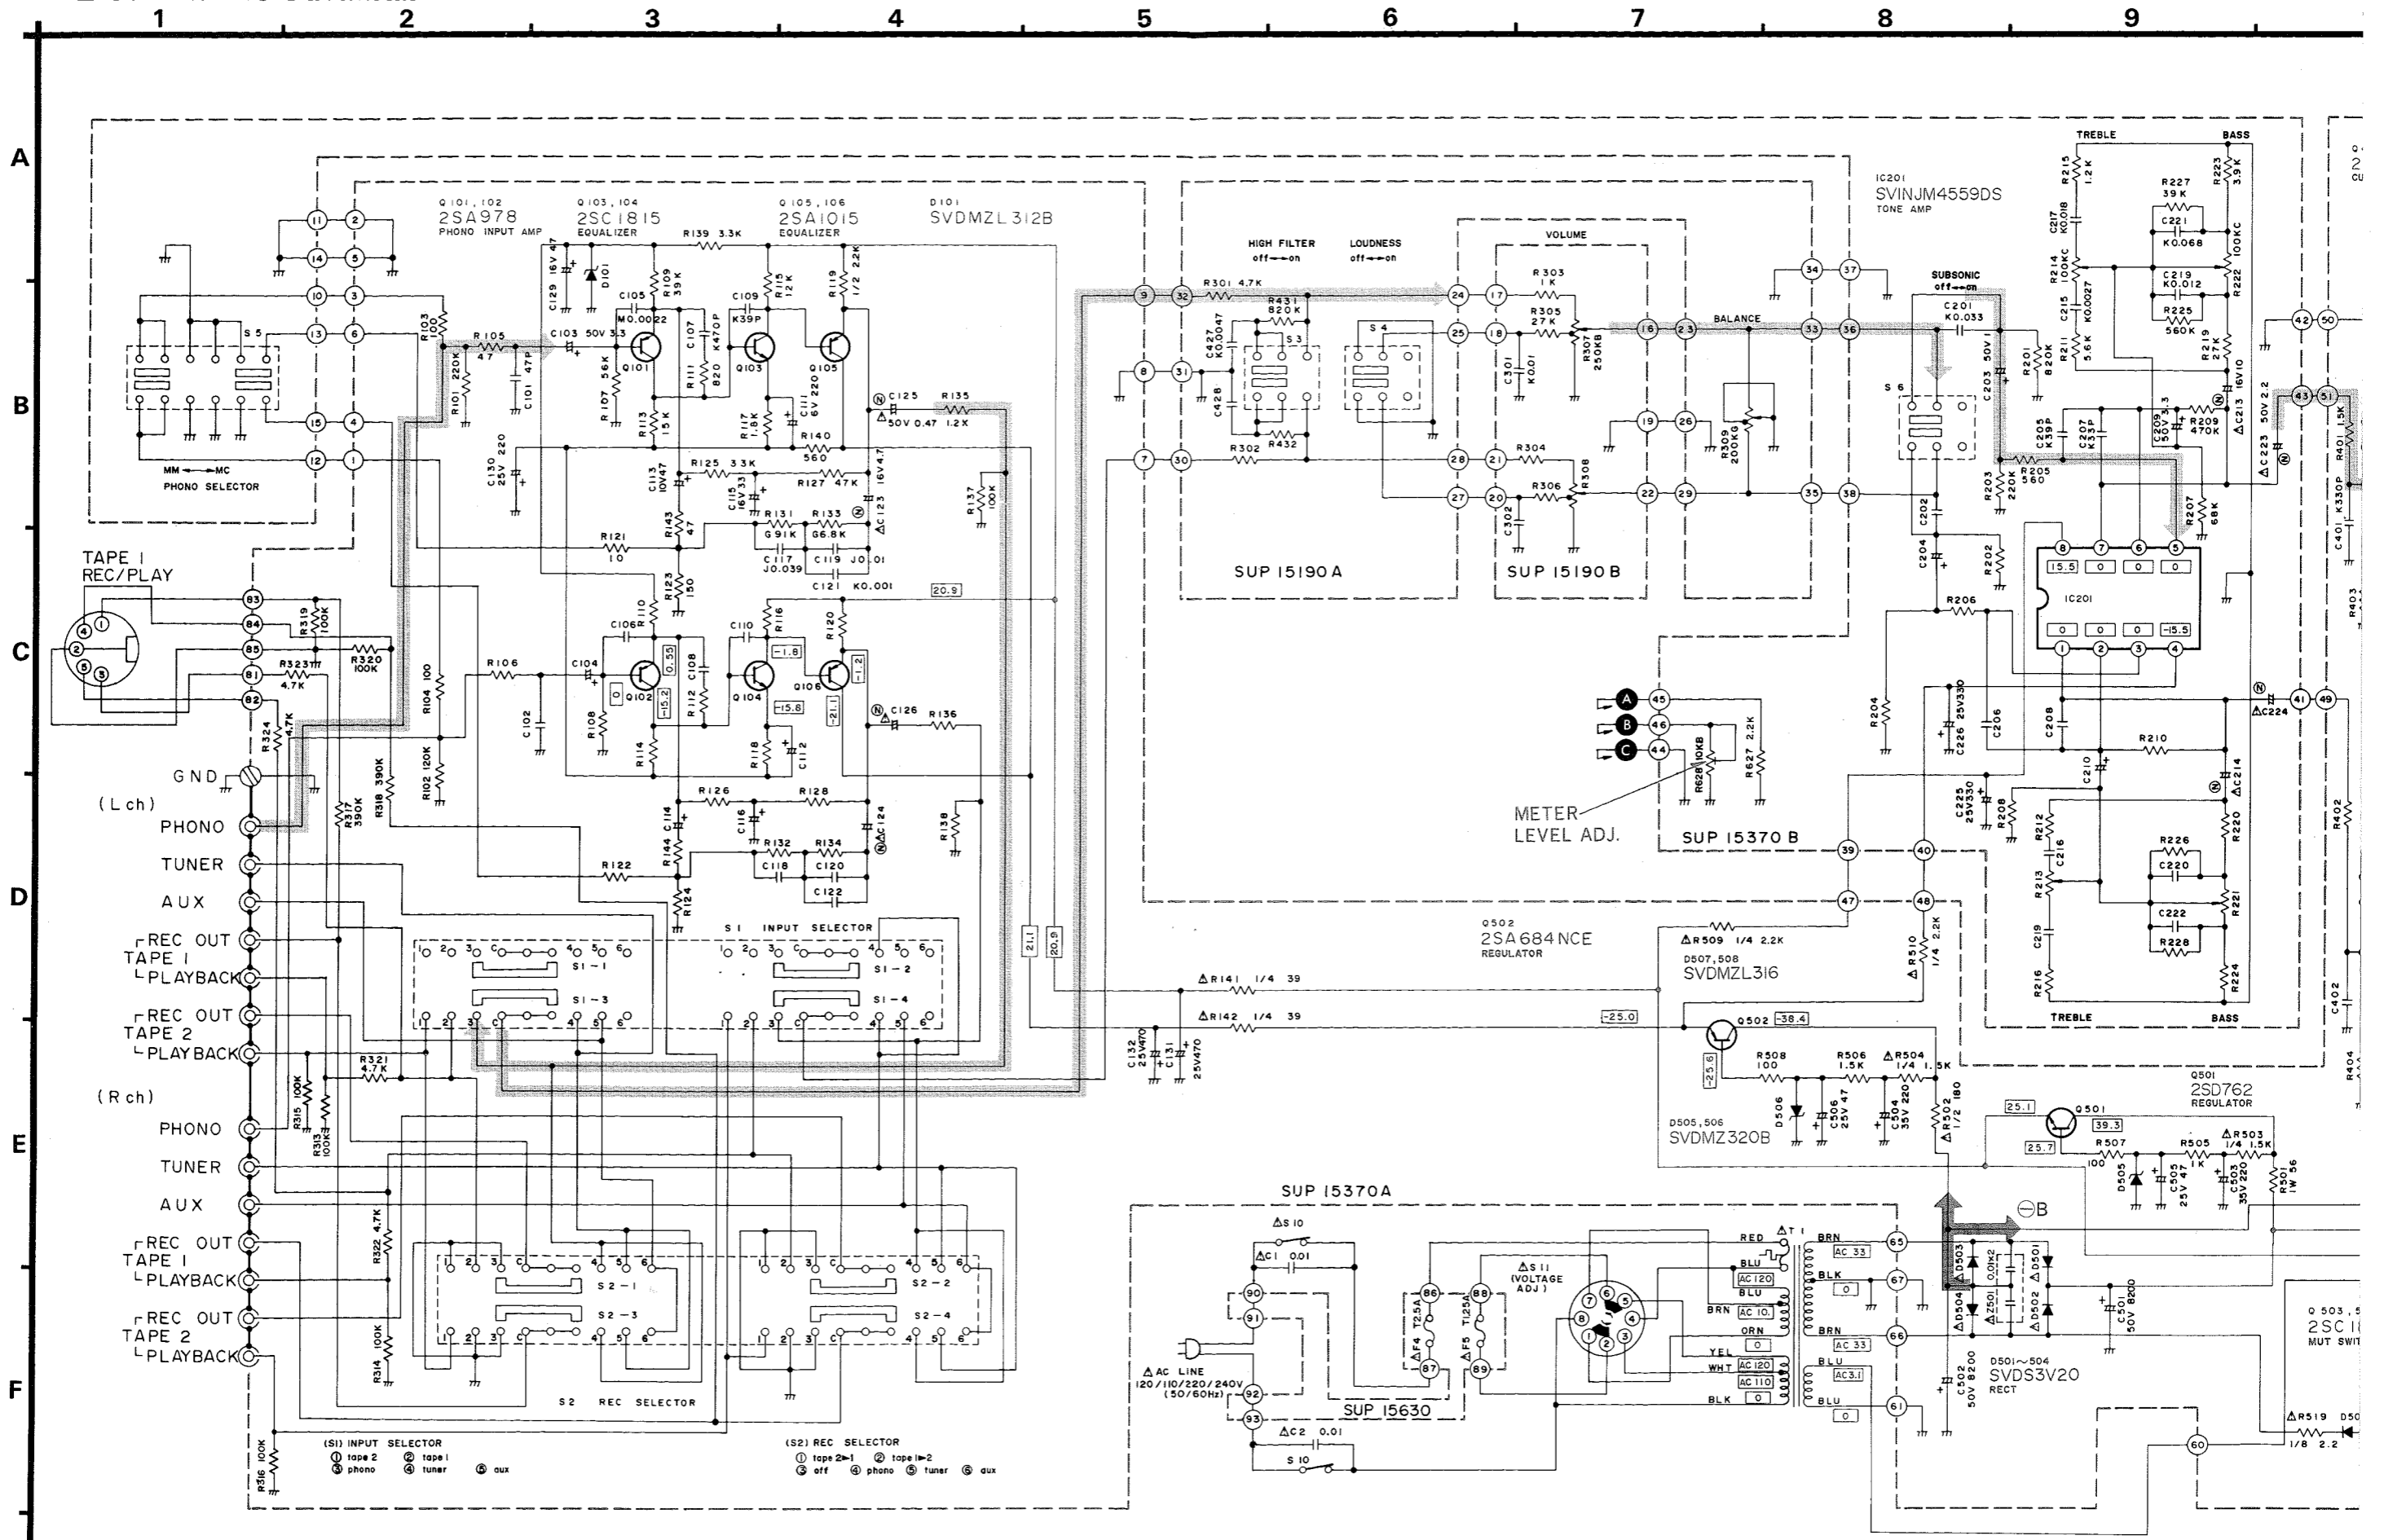



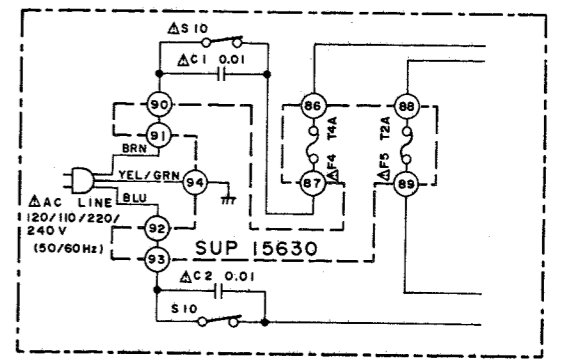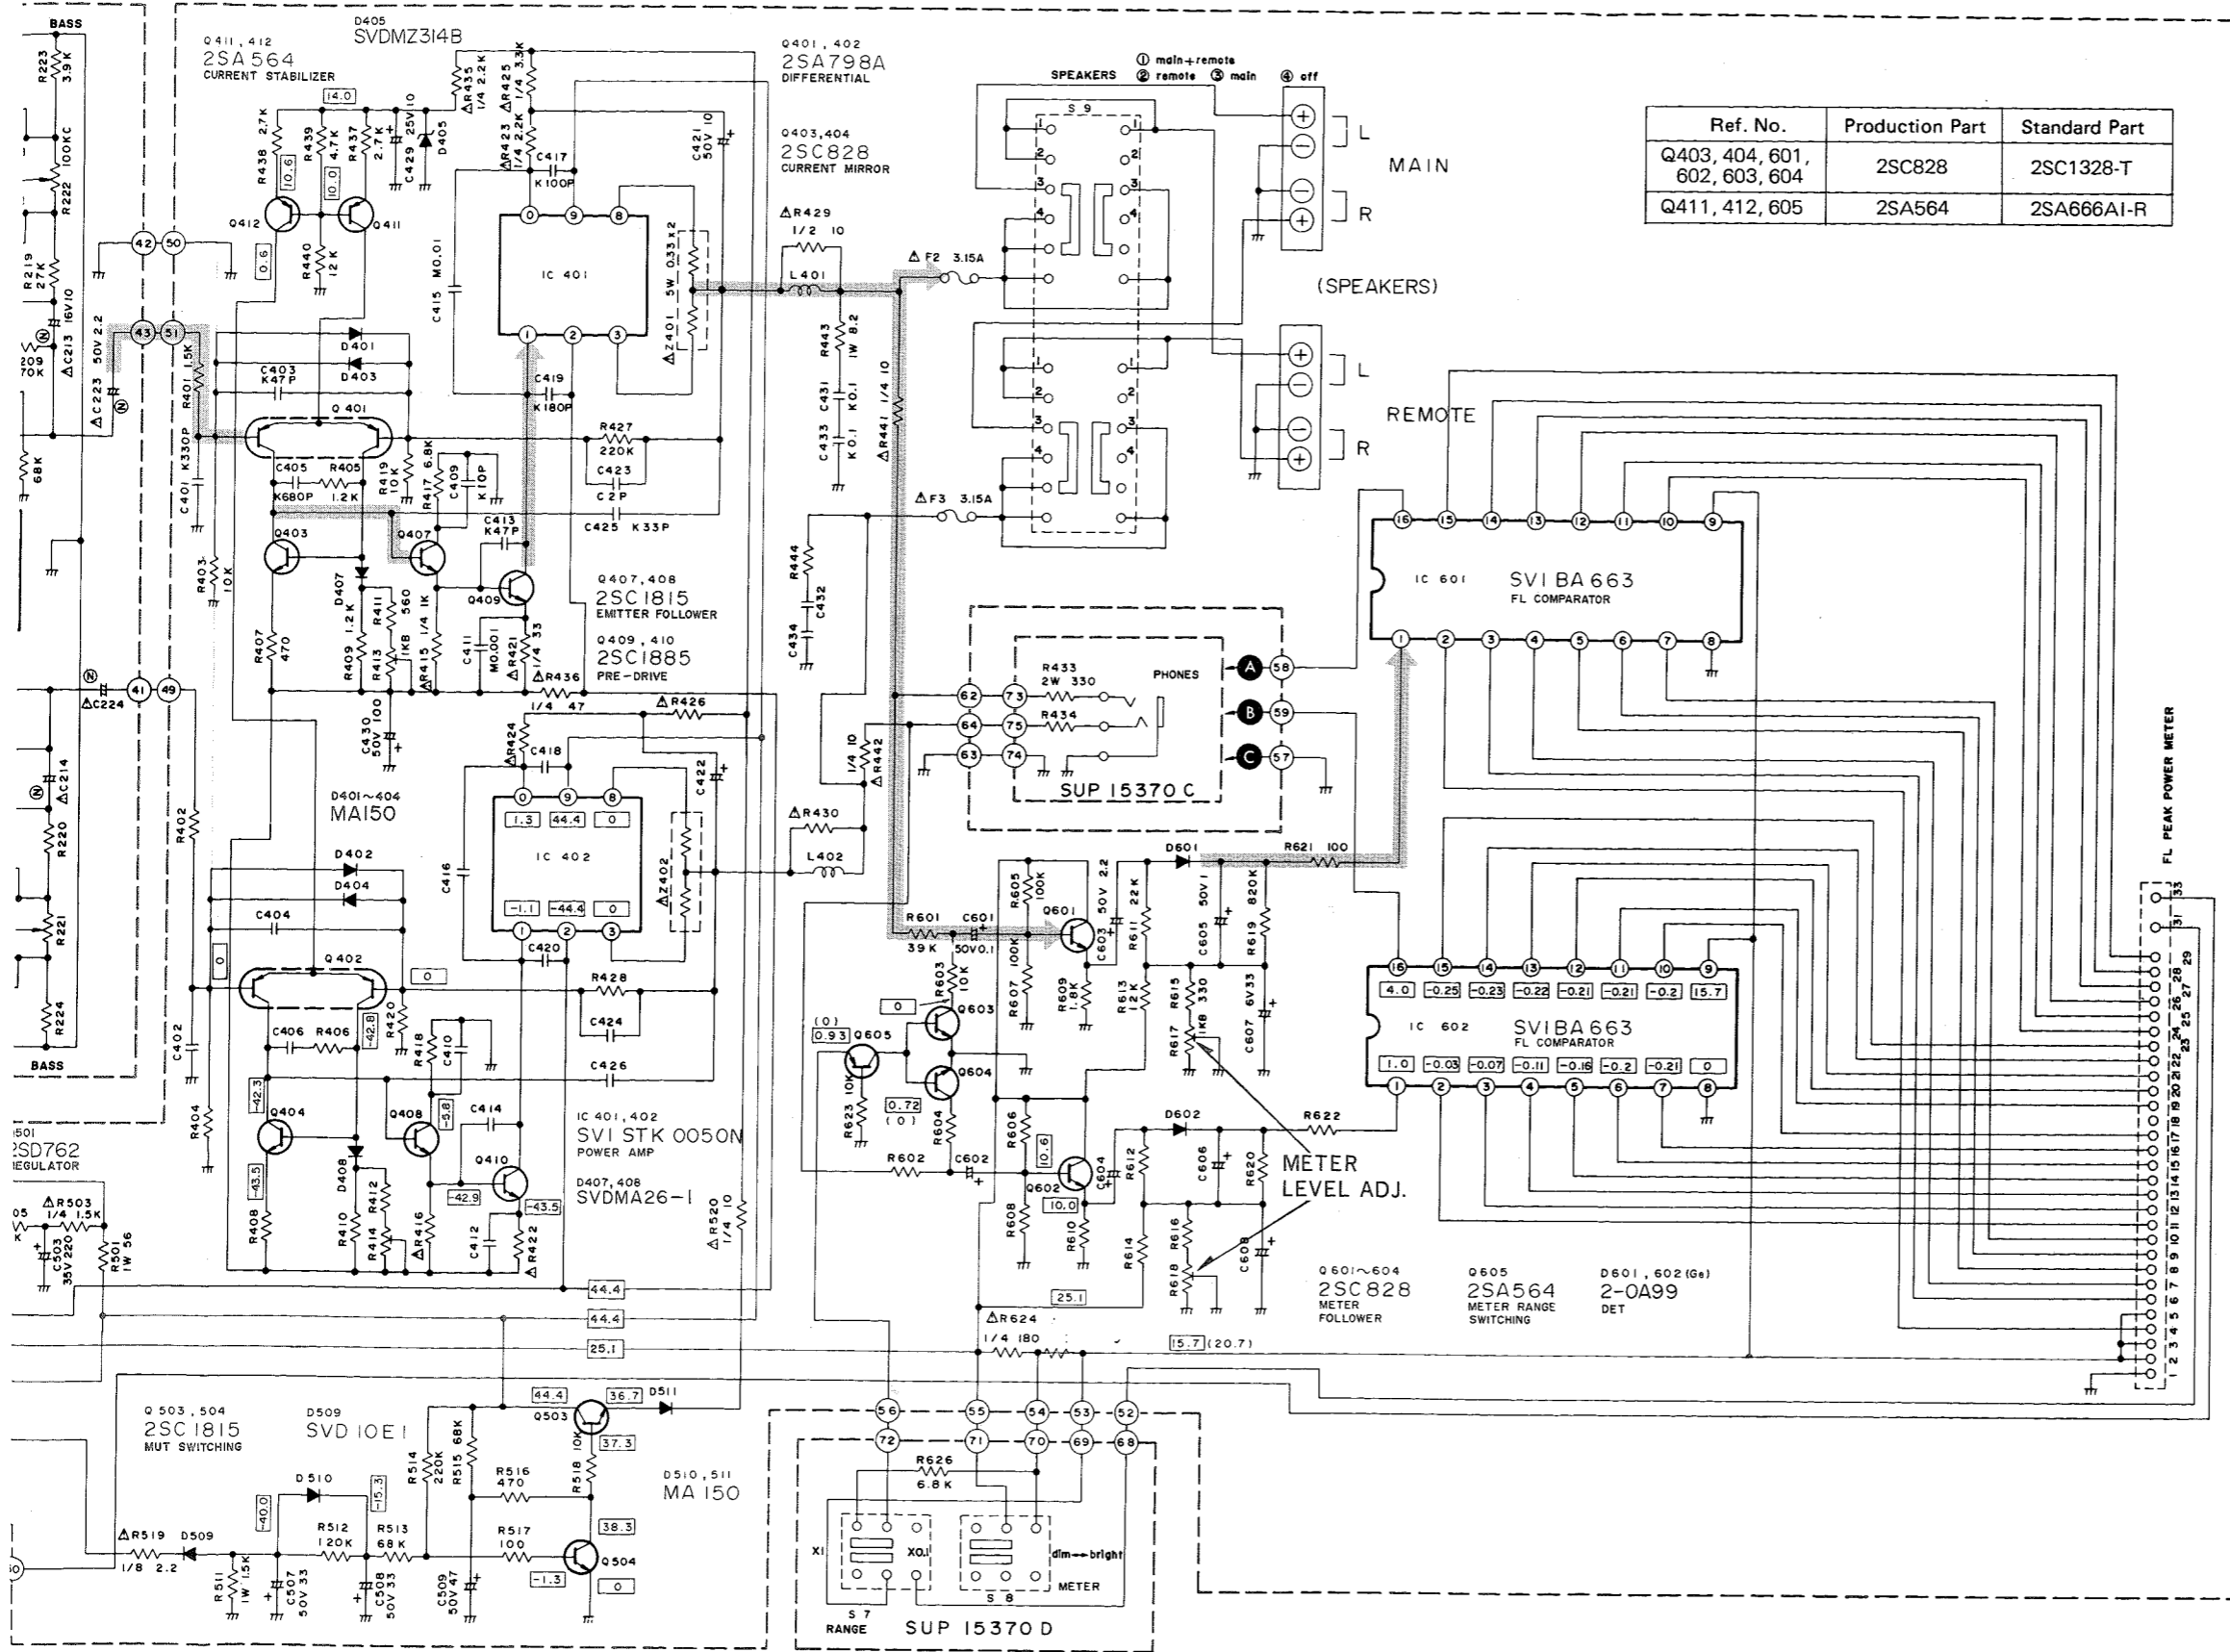


• Power Supply Circuitry of Product For (XAL) only.

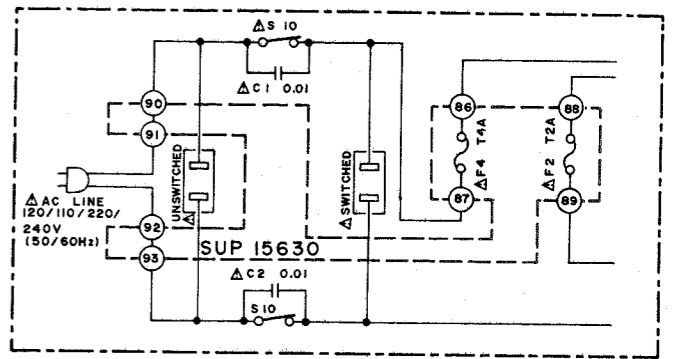


• Power Supply Circuitry of Products For (X) and (XA).

# ■ BLOCK DIAGRAM


LEFT

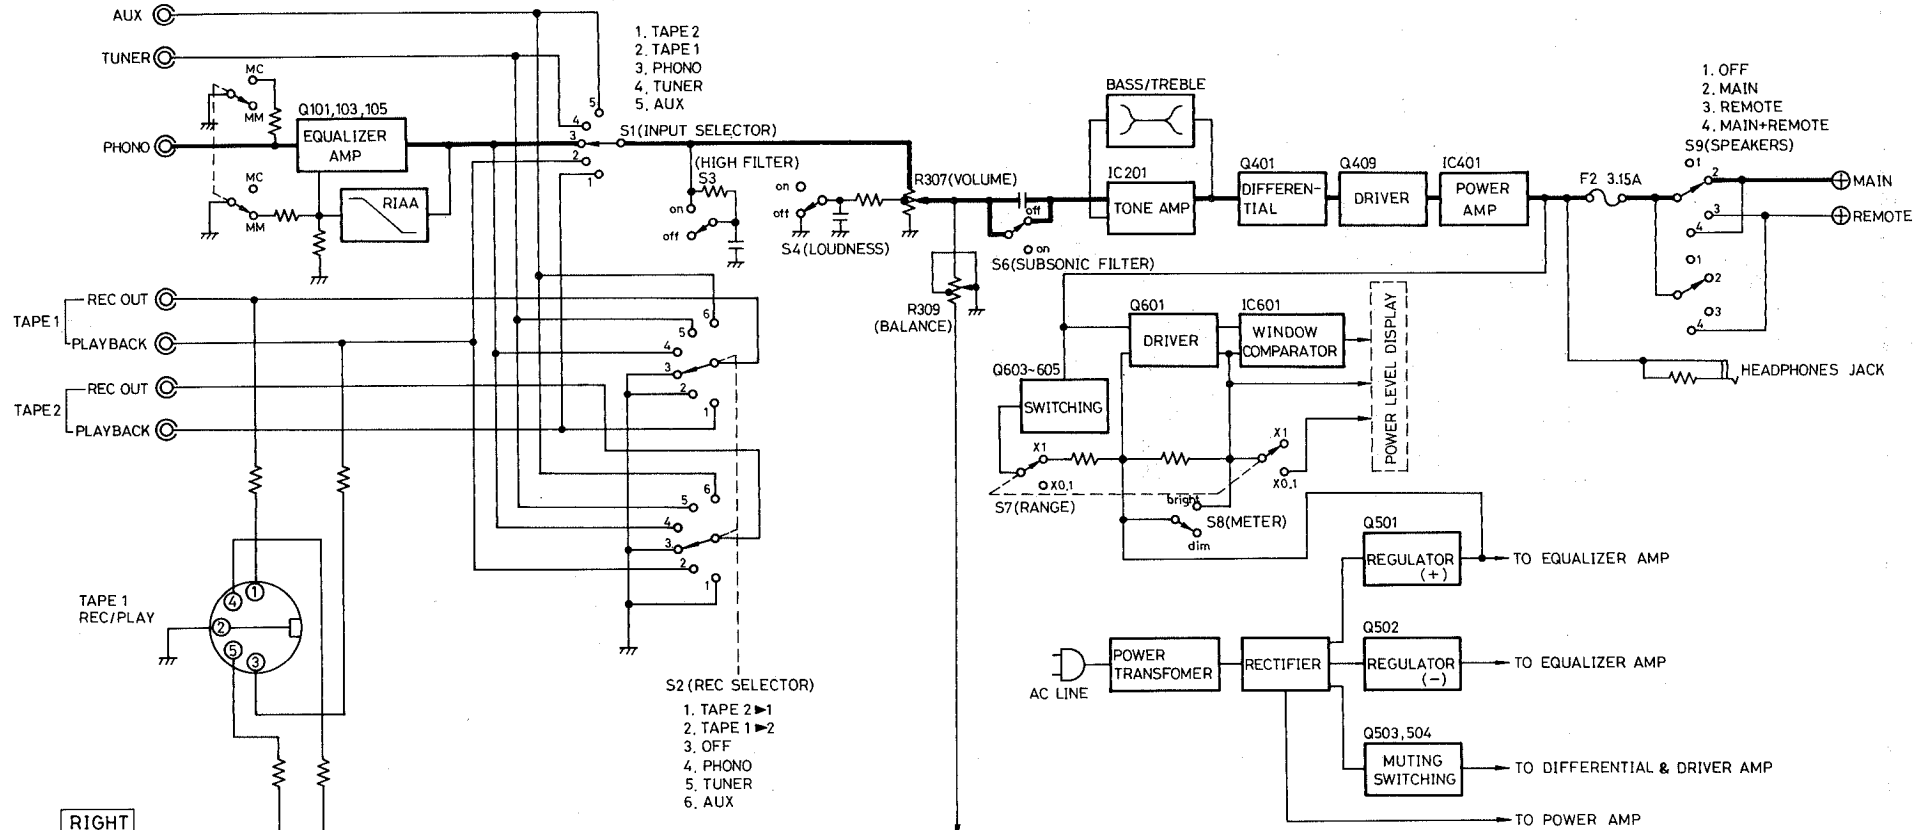

RIGHT

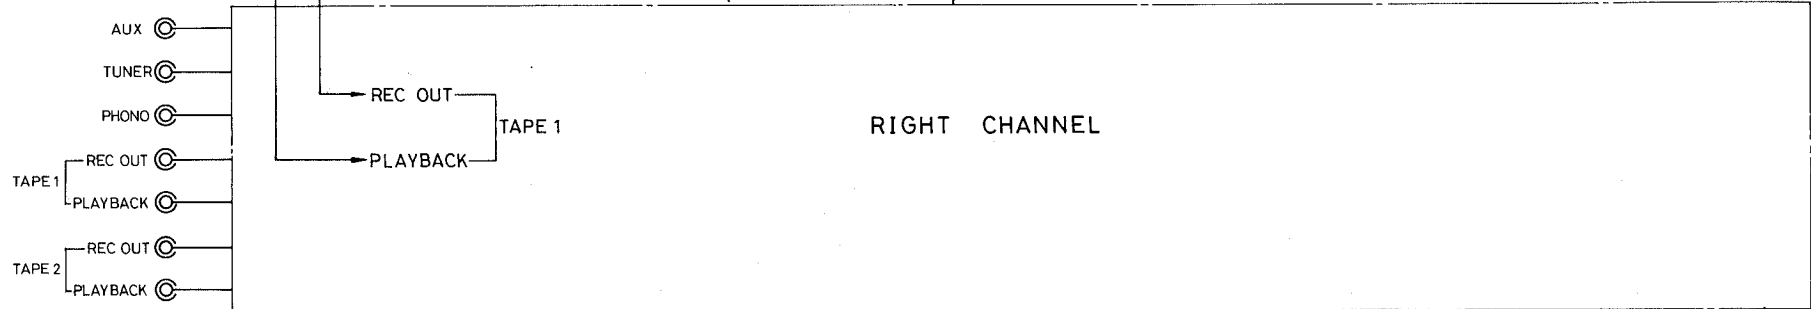

EXPLODED VIEWS

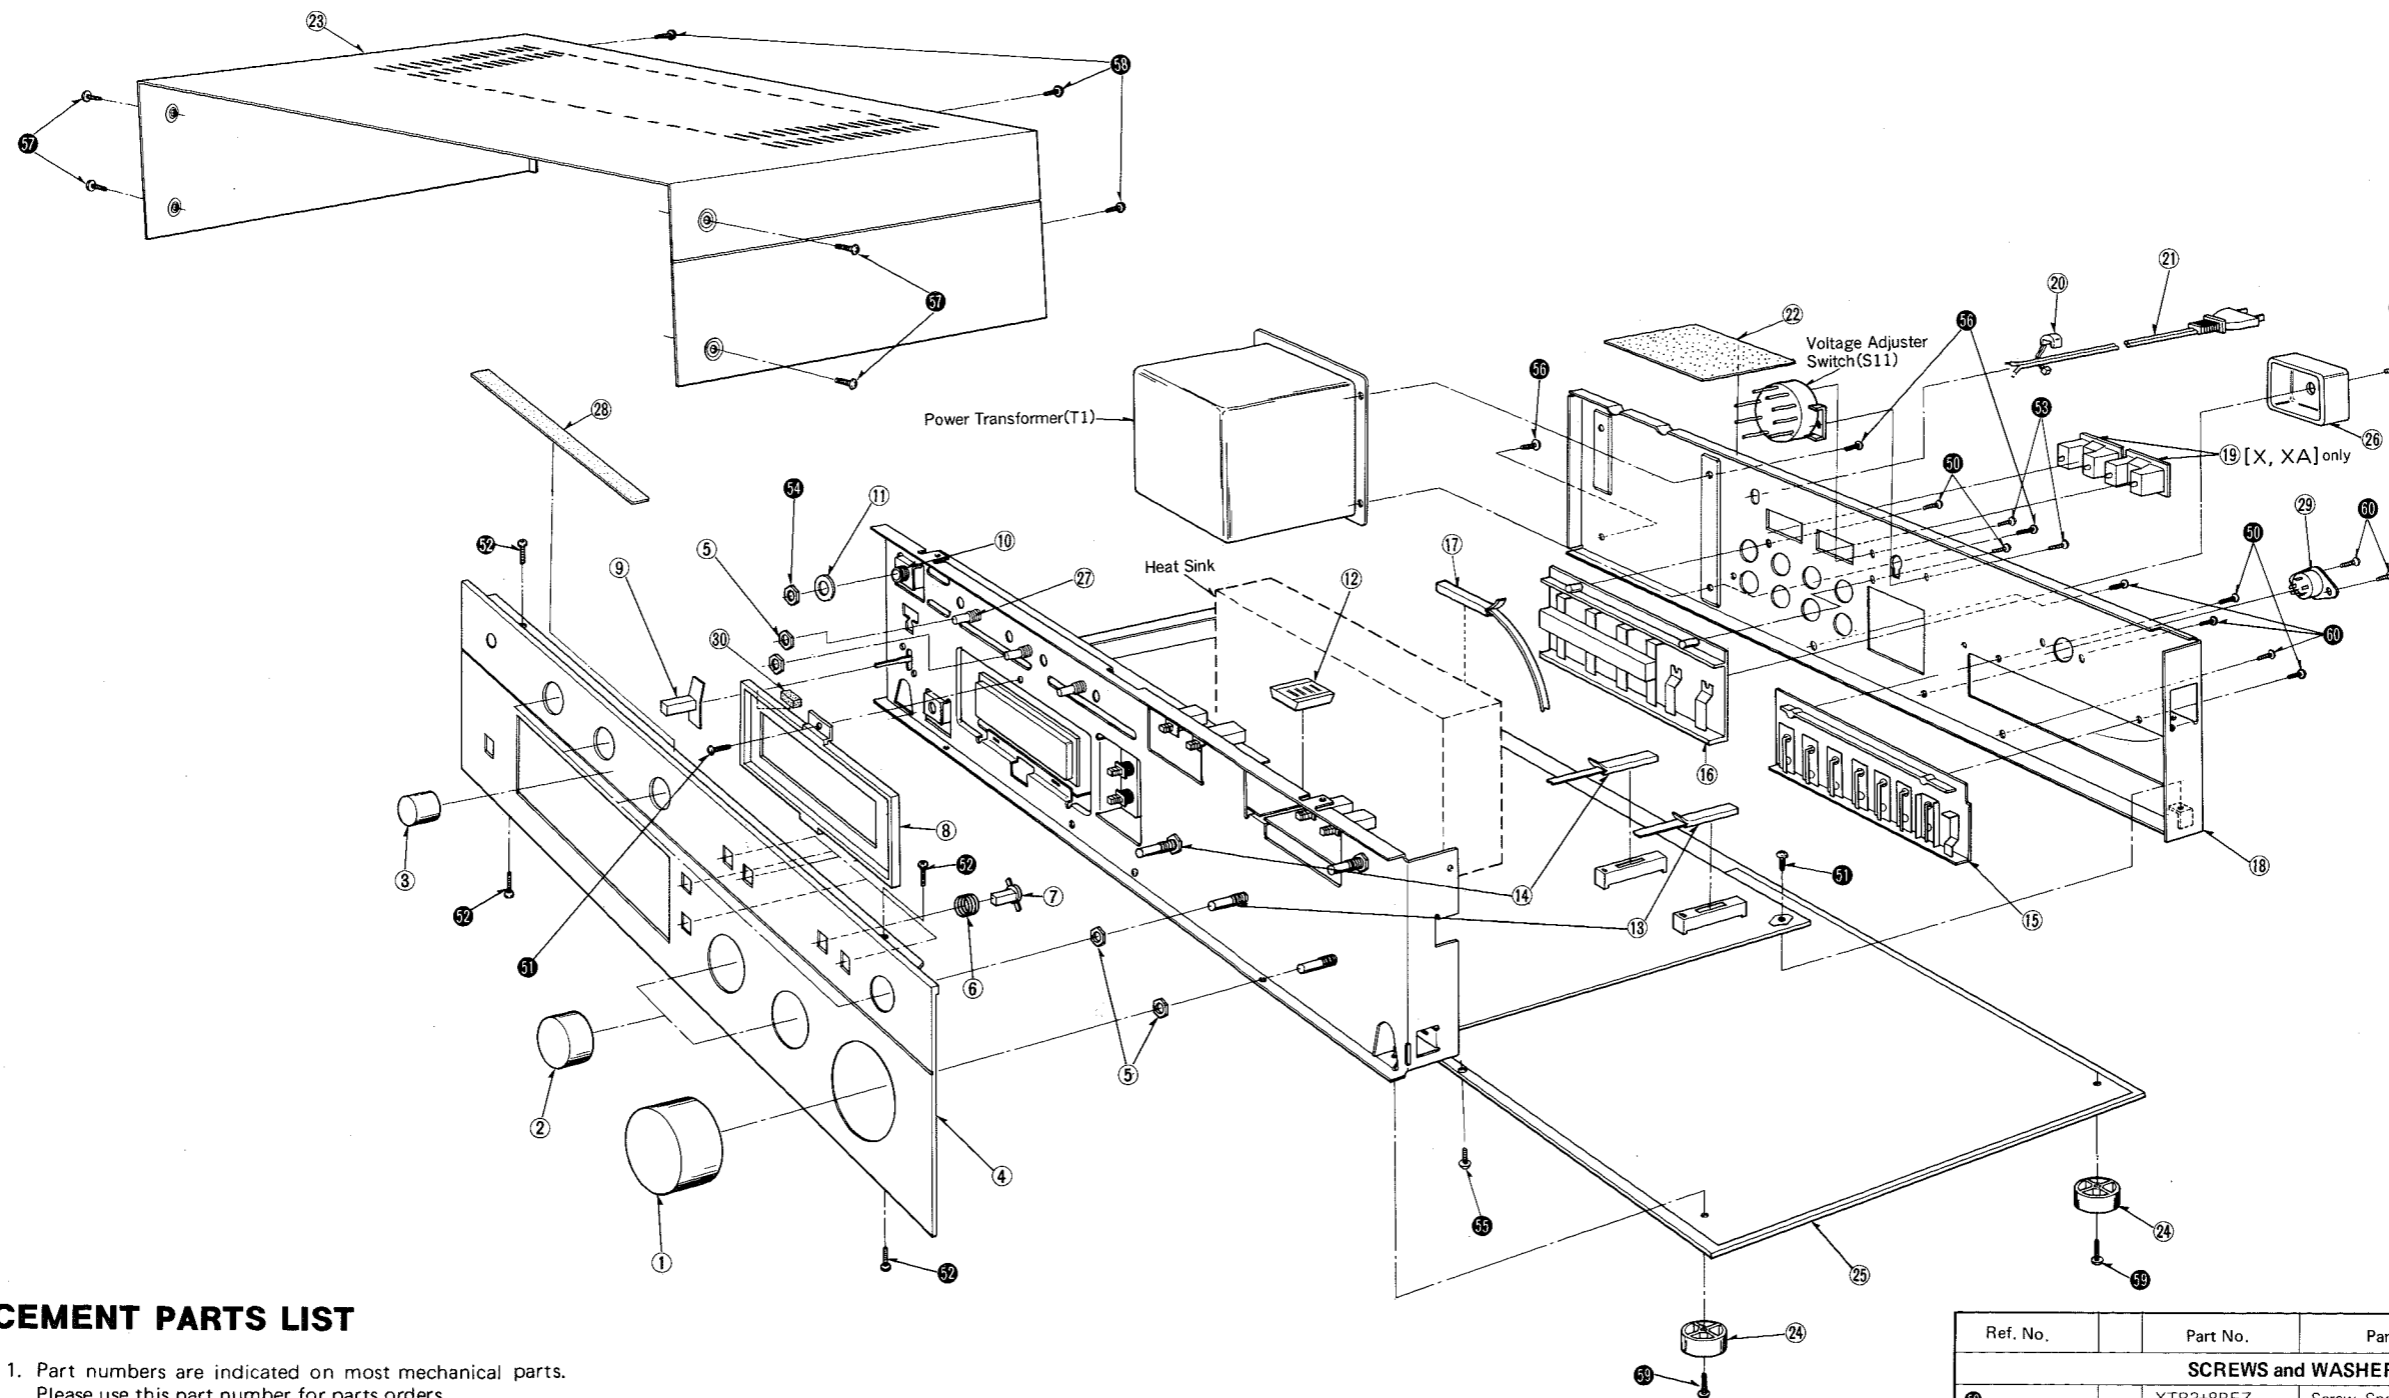

REPLACEMENT PARTS LIST

- NOTES : 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.  
 2.  $\Delta$  indicates that only parts specified by the manufacturer be used for safety.

Ref. No.	Part No.	Part Name & Description
<b>CABINET and CHASSIS PARTS</b>		
1	SBN821	Knob, Volume
2	SBN823	Knob, Rec Selector & Input Selector
3	SBN825	Knob, Speakers Selector, Bass, Treble & Balance
4	SGWU8055D	Panel, Front Ass'y
5	SNE4021	Nut, Volume, Rec Selector, Input Selector Balance, Treble Bass, Speakers
6	SUS123-1	Spring, Range, Meter, Subsonic Filter, Phono High Filter & Loudness Switch
7	SBC197	Button, Range, Meter, Subsonic Filter, Phono High Filter & Loudness Switch
8	SYE545	Bracket, Fluorescent Peak-Power Meters
9	SBD19	Button, Power Switch
10	XCJ6P21B-A	Jack, Headphones

Ref. No.	Part No.	Part Name & Description
11	SNE59-1	Washer, Headphones Jack
12	SJS5409	Connector, 4 pin
13	ESA3310	Wire, Remote Control Switch
14	ESA339	Wire, Remote Control Switch
15	SJF3029	Terminal, Input
16	SJF8013-1	Terminal, Speakers
17	ESA2073	Wire, Remote Control Switch
18 [E]	SGP1670A	Rear Panel
18 [XE, EG, XGH]	SGPU8055E	Rear Panel, SGP1670A with Name Plate (SGT18330)
18 [XAL]	SGPU8055L	Rear Panel, SGP1670-1A with Name Plate (SGT18350)
18 [X, XA]	SGP1650-1A	Rear Panel
19 [X, XA] only $\Delta$	SJSA66-1	Socket, AC Outlet

Ref. No.	Part No.	Part Name & Description
20 [E, X, XA, EG, XGH, XGF, EB]	SHR127	Bushing, AC Cord
20 [XE]	SHR129	Bushing, AC Cord
20 [XAL]	SHR131	Bushing, AC Cord
21 [E, EG, XGH, XGF, EB] $\Delta$	RJA23ZC	AC Cord, with Pulg
21 [X, XA] $\Delta$	SJA97	AC Cord, with Pulg
21 [XE] $\Delta$	RJA45ZC	AC Cord
21 [XAL] $\Delta$	QFC1207M	AC Cord, with Pulg
22	SHS6107	Cloth, Protector
22 [X, XA] only	SHS6109	Cloth, Protector
23	SKA10414	Cabinet
24	SKLA7-1	Foot, Set
25	SYU189-1	Bottom Board
26	SUV337	Cover, Speaker Fuses
27	ESA23426	Remote Control Switch, Speakers
28	SHS6101-1	Cloth, Protector
29	RJS31-1	Socket, DIN (REC/PLAY)
30	SHG1529	Rubber Cushion, FL Peak-Power Meter Bracket

Ref. No.	Part No.	Part Name & Description
<b>SCREWS and WASHERS</b>		
50	XTB3+8BFZ	Screw, Speaker Terminal, Input Terminal, & Fuse Cover M'tg
51	XSN3+8S	Screw, FL Peak-Power Meters Bracket M'tg
	XWA3	Washer (Spring), FL Peak-Power Meters Bracket Screw
52	XWG3	Washer, FL Peak-Power Meters Bracket Screw
	XTB3+8B	Screw, Front Panel M'tg
53	XWC3B	Washer, Front Panel Screw
	XSN3+6FZS	Screw, Voltage Adjuster Switch M'tg
54	XWA3BFZ	Washer (Spring) Voltage Adjuster Switch Screw
55	XNSS12	Nut, Headphones Jack M'tg
	XTN3+10B	Screw, Bottom Board M'tg
56	XWG3	Washer, Bottom Board Screw
	XTB4+10FZ	Screw, Power Source Transformer M'tg
57	XWA4FZ	Washer (Spring), Power Source Transformer Screw
	XWG4FZ	Washer, Power Source Transformer Screw
58	XTB4+8FFN	Screw, Cabinet M'tg
	XTB3+8BFN	Screw, Cabinet M'tg
59	XWC3B	Washer, Cabinet Screw
	XTB3+16B	Screw, Set Foot M'tg
60	XTB3+8FZ	Screw, Rear Panel and DIN Socket M'tg
	XWC3FZ	Washer, Rear Panel and DIN Socket Screw

## REPLACEMENT PARTS LIST ..... Electric Parts

- NOTES :**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
  - △ indicates that only parts specified by the manufacturer be used for safety.

Ref. No.	Part No.	Part Name & Description	Ref. No.	Part No.	Part Name & Description
<b>INTEGRATED CIRCUITS</b>			<b>METER</b>		
IC201 IC401, 402 IC601, 602	SVINJM4559DS SVISTK0050N SVIBA663	IC, Tone Amplifier IC, Power Amplifier IC, FL Comparator		SAD24A17YS	Meter, Fluorescent Peak-Power
<b>TRANSISTORS</b>			<b>RESISTORS</b>		
Q101, 102 Q103, 104	2SA978-G 2SC1815-Y	Transistor, PHONO Input Amplifier Transistor, Equalizer Amplifier	R101, 102 R103, 104 R105, 106 R107, 108 R109, 110 R111, 112 R113, 114 R115, 116 R117, 118 R119, 120	ERD25TJ224 ERD25TJ101 ERD25TJ470 ERD25TJ563 ERD25TJ393 ERD25TJ821 ERD25TJ153 ERD25TJ123 ERD25TJ182 ERD50TJ222	Carbon, 220kΩ, 1/4W, ± 5% Carbon, 100Ω, 1/4W, ± 5% Carbon, 47Ω, 1/4W, ± 5% Carbon, 56kΩ, 1/4W, ± 5% Carbon, 39kΩ, 1/4W, ± 5% Carbon, 820Ω, 1/4W, ± 5% Carbon, 15kΩ, 1/4W, ± 5% Carbon, 12kΩ, 1/4W, ± 5% Carbon, 1.8kΩ, 1/4W, ± 5% Carbon, 2.2kΩ, 1/2W, ± 5%
Q105, 106	2SA1015-O	Transistor, Equalizer Amplifier (Use in ranks Y or O)	R121, 122 R123, 124 R125, 126 R127, 128	ERD25TJ100 ERD25TJ151 ERD25TJ333 ERD25TJ473	Carbon, 10Ω, 1/4W, ± 5% Carbon, 150Ω, 1/4W, ± 5% Carbon, 33kΩ, 1/4W, ± 5% Carbon, 47kΩ, 1/4W, ± 5%
Q401, 402	2SA798A-G2	Transistor, Differential Amplifier (Use in ranks F2 or G2)	R131, 132 R133, 134 R135, 136 R137, 138 R139	ERO25CKG9102 ERO25CKG6801 ERD25TJ122 ERD25TJ104 ERD25TJ332	Metal Film, 91kΩ, 1/4W, ± 5% Metal Film, 6.8kΩ, 1/4W, ± 5% Carbon, 1.2kΩ, 1/4W, ± 5% Carbon, 100kΩ, 1/4W, ± 5% Carbon, 3.3kΩ, 1/4W, ± 5%
Q403, 404	2SC1328-T	Transistor, Current Mirror (Use in ranks S, T or U)	R140	ERD25TJ561	Carbon, 560Ω, 1/4W, ± 5%
Q407, 408	2SC1815-Y	Transistor, Emitter Follower (or O)	R141, 142 R143, 144 R201, 202 R203, 204 R205, 206 R207, 208 R209, 210 R211, 212 R215, 216	△ ERD25FJ390 ERD25TJ470 ERD25TJ824 ERD25TJ224 ERD25TJ561 ERD25TJ683 ERD25TJ474 ERD25TJ562 ERD25TJ122	Carbon, 39Ω, 1/4W, ± 5% Carbon, 47Ω, 1/4W, ± 5% Carbon, 820kΩ, 1/4W, ± 5% Carbon, 220kΩ, 1/4W, ± 5% Carbon, 560Ω, 1/4W, ± 5% Carbon, 68kΩ, 1/4W, ± 5% Carbon, 470kΩ, 1/4W, ± 5% Carbon, 5.6kΩ, 1/4W, ± 5% Carbon, 1.2kΩ, 1/4W, ± 5%
Q409, 410	2SC1885-R	Transistor, Pre Drive Amplifier (Use in ranks Q, R or S)	R219, 220 R223, 224 R225, 226 R227, 228 R301, 302 R303, 304 R305, 306 R313, 314	ERD25TJ273 ERD25TJ392 ERD25TJ564 ERD25TJ393 ERD25TJ472 ERD25TJ102 ERD25TJ273 ERD25TJ104	Carbon, 27kΩ, 1/4W, ± 5% Carbon, 3.9kΩ, 1/4W, ± 5% Carbon, 560kΩ, 1/4W, ± 5% Carbon, 39kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 1kΩ, 1/4W, ± 5% Carbon, 27kΩ, 1/4W, ± 5% Carbon, 100kΩ, 1/4W, ± 5%
Q411, 412	2SA666AI-R	Transistor, Current Stabilizer (Use in ranks P, Q or R)	R315, 316 R317, 318 R319, 320 R321, 322 R323, 324	ERD25TJ104 ERD25TJ394 ERD25TJ104 ERD25TJ472 ERD25TJ472	Carbon, 100kΩ, 1/4W, ± 5% Carbon, 390kΩ, 1/4W, ± 5% Carbon, 100kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5%
Q501	2SD762-Q	Transistor, Regulator (Use in ranks Q or R)	R401, 402 R403, 404 R405, 406 R407, 408	ERD25TJ152 ERD25TJ103 ERD25TJ122 ERD25TJ471	Carbon, 1.5kΩ, 1/4W, ± 5% Carbon, 10kΩ, 1/4W, ± 5% Carbon, 1.2kΩ, 1/4W, ± 5% Carbon, 470Ω, 1/4W, ± 5%
Q502	2SA684NCE-R	Transistor, Regulator (Use in ranks Q or R)	R409, 410 R411, 412 R415, 416 R417, 418 R419, 420 R421, 422 R423, 424 R425, 426 R427, 428 R429, 430 R431, 432 R433, 434 R435 R436 R437, 438	ERD25TJ122 ERD25TJ561 ERD25FJ102 ERD25TJ682 ERD25TJ103 ERD25FJ330 ERD25FJ222 ERD25FJ332 ERD25TJ224 ERD50FJ100 ERD25TJ824 ERG2ANJ331 ERD25FJ222 ERD25FJ470 ERD25TJ272	Carbon, 560Ω, 1/4W, ± 5% Carbon, 39Ω, 1/4W, ± 5% Carbon, 1kΩ, 1/4W, ± 5% Carbon, 6.8kΩ, 1/4W, ± 5% Carbon, 10kΩ, 1/4W, ± 5% Carbon, 33Ω, 1/4W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5% Carbon, 3.3kΩ, 1/4W, ± 5% Carbon, 220kΩ, 1/4W, ± 5% Carbon, 10Ω, 1/2W, ± 5% Carbon, 820kΩ, 1/4W, ± 5% Metal Oxide, 330Ω, 2W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5% Carbon, 47Ω, 1/4W, ± 5% Carbon, 2.7kΩ, 1/4W, ± 5%
Q503, 504	2SC1815-Y	Transistor, Muting Switching (Use )	R439 R440 R441, 442 R443, 444 R501 R502 R503, 504 R505 R506	ERD25TJ472 ERD25TJ123 ERD25FJ100 ERX1ANJ8R2 ERG1ANJ560 ERD50FJ181 ERD25FJ152 ERD25TJ102 ERD25TJ152	Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 12kΩ, 1/4W, ± 5% Carbon, 10Ω, 1/4W, ± 5% Metal Film, 8.2Ω, 1W, ± 5% Metal Oxide, 56Ω, 1W, ± 5% Carbon, 180Ω, 1/2W, ± 5% Carbon, 1.5kΩ, 1/4W, ± 5% Carbon, 1kΩ, 1/4W, ± 5% Carbon, 1.5kΩ, 1/4W, ± 5%
Q601, 602, 603, 604 Q605	2SC1328-T  2SA666AI-R	Transistor, Meter Range Switching (Use in ranks S, T or U) Transistor, Meter Range Switching (Use in ranks P, Q or R)			
<b>DIODES</b>					
D101 D401, 402, 403, 404 D407, 408 D405 D501, 502, 503, 504 D505, 506 D509 D510, 511 D601, 602	SVDMZL312B MA150  SVDMA26-1 SVDMZ314B SVDS3V20  SVDMZ320B SVD10E1 MA150 OA99	Diode, 12V Zener Diode, Input Limiter  Diode, Current Mirror Diode, 14V Zener Rectifier  Diode, 20V Zener Rectifier Diode, Switching Diode, Detector			
<b>COILS and TRANSFORMER</b>					
L401, 402 T1	SLQY15G-3U SLT5P159	Coil, Power Amplifier Output Transformer, Power Source			
<b>COMPONENT COMBINATIONS</b>					
Z401, 402 Z501	ERF5G6EKR33N EXRFS203ZS	Non-Flammable Resistor, 0.33Ω (X2) 5W 0.01μF (X2), Rectifier			
<b>VARIABLE RESISTORS</b>					
R213, 214, 221, 222 R307, 308 R309 R413, 414 R617, 618 R628	EWK32F25C15S  EWF2LA028BF5 EVH63F25G25S EVL33AA00B13 EVL33AA00B13 EVL33AA00B14	Treble & Bass Control, 100kΩ (C)  Volume Control, 250kΩ (B) Balance Control, 200kΩ (G) DC Unbalance Adjustment, 1kΩ (B) Meter Level Adjustment, 1kΩ (B) Meter Level Adjustment, 10kΩ (B)			
<b>FUSES</b>					
F2, 3 F4 F5	△ XBA2C31SS0 △ XBAS2C25T1A △ XBA2C12TR0	Fuse, 3.15A (250V), Speaker Circuit Fuse, T2.5A (250V), Primary Fuse, T1.25A (250V), Primary			
<b>SWITCHES</b>					
S1, 2 S3, 4 S5, 6 S7, 8 S9 S10 S11	ESA2682 SSH257 SSH253 SSH257 ESA273 ESL21182 ESE37200	Switch, Input & Recording Selector Switch, High Filter & Loudness Switch, Phono Selector & Subsonic Filter Switch, Meter Range & Bright/Dimmer Switch, Speakers Switch, Power Source Switch, Voltage Adjuster			

Ref. No.	Part No.	Part Name & Description
R507, 508	<b>ERD25TJ101</b>	Carbon, 100Ω, 1/4W, ± 5%
R509, 510	△ ERD25FJ222	Carbon, 2.2kΩ, 1/4W, ± 5%
R511	<b>ERG1ANJ152</b>	Metal Oxide, 1.5kΩ, 1W, ± 5%
R512	<b>ERD25TJ124</b>	Carbon, 120kΩ, 1/4W, ± 5%
R513	<b>ERD25TJ683</b>	Carbon, 68kΩ, 1/4W, ± 5%
R514	<b>ERD25TJ224</b>	Carbon, 220kΩ, 1/4W, ± 5%
R515	<b>ERD25TJ683</b>	Carbon, 68kΩ, 1/4W, ± 5%
R516	<b>ERD25TJ471</b>	Carbon, 470Ω, 1/4W, ± 5%
R517	<b>ERD25TJ101</b>	Carbon, 100Ω, 1/4W, ± 5%
R518	<b>ERD25TJ103</b>	Carbon, 10kΩ, 1/4W, ± 5%
R519	△ ERD18FAJ2R2	Carbon, 2.2Ω, 1/8W, ± 5%
R520	△ ERD25FJ100	Carbon, 10Ω, 1/4W, ± 5%
R601, 602	<b>ERD25TJ393</b>	Carbon, 39kΩ, 1/4W, ± 5%
R603, 604	<b>ERD25TJ103</b>	Carbon, 10kΩ, 1/4W, ± 5%
R605, 606	<b>ERD25TJ104</b>	Carbon, 100kΩ, 1/4W, ± 5%
R607, 608	<b>ERD25TJ104</b>	Carbon, 100kΩ, 1/4W, ± 5%
R609, 610	<b>ERD25TJ182</b>	Carbon, 1.8kΩ, 1/4W, ± 5%
R611, 612	<b>ERD25TJ223</b>	Carbon, 22kΩ, 1/4W, ± 5%
R613, 614	<b>ERD25TJ123</b>	Carbon, 12kΩ, 1/4W, ± 5%
R615, 616	<b>ERD25TJ331</b>	Carbon, 330Ω, 1/4W, ± 5%
R619, 620	<b>ERD25TJ824</b>	Carbon, 820kΩ, 1/4W, ± 5%
R621, 622	<b>ERD25TJ101</b>	Carbon, 100Ω, 1/4W, ± 5%
R623	<b>ERD25TJ103</b>	Carbon, 10kΩ, 1/4W, ± 5%
R624	△ ERD25FJ181	Carbon, 180Ω, 1/4W, ± 5%
R626	<b>ERD25TJ682</b>	Carbon, 6.8kΩ, 1/4W, ± 5%
R627	ERD25TJ222	Carbon, 2.2kΩ, 1/4W, ± 5%

**CAPACITORS**

C1, 2	△ ECKDHS103SE2	Ceramic, 0.01μF, 450VAC,
C101, 102	ECCD1H470K	Ceramic, 47pF, 50V, ±10%
C103, 104	ECEA50M3R3SE	Electrolytic, 3.3μF, 50V
C105, 106	ECKD1H222MD	Ceramic, 0.0022μF, 50V, ±20%
C107, 108	ECKD1H471KB	Ceramic, 470pF, 50V, ±10%
C109, 110	ECCD1H390K	Ceramic, 39pF, 50V, ±10%
C111, 112	<b>ECEA1AS221</b>	Electrolytic, 220μF, 10V
C113, 114	<b>ECEA10Z47</b>	Electrolytic, 47μF, 10V
C115, 116	<b>ECEA1CS330</b>	Electrolytic, 33μF, 16V
C117, 118	ECQM1H393JZ	Polyester, 0.039μF, 50V, ± 5%
C119, 120	ECQM1H103JZ	Polyester, 0.01μF, 50V, ± 5%
C121, 122	ECQM1H102KZ	Polyester, 0.001μF, 50V, ± 5%
C123, 124	△ <b>ECEA25N4R7</b>	Non-Polar Electrolytic, 4.7μF, 25V
C125, 126	△ <b>ECEA50NR47</b>	Non-Polar Electrolytic, 0.47μF, 50V
C129	<b>ECEA1ES470</b>	Electrolytic, 47μF, 25V
C130	<b>ECEA1ES221</b>	Electrolytic, 220μF, 25V
C131, 132	<b>ECEA1ES471</b>	Electrolytic, 470μF, 25V
C201, 202	ECQM1H333KZ	Polyester, 0.033μF, 50V, ±10%
C203, 204	<b>ECEA50Z1</b>	Electrolytic, 1μF, 50V
C205, 206	ECCD1H390K	Ceramic, 39pF, 50V, ±10%
C207, 208	ECCD1H330K	Ceramic, 33pF, 50V, ±10%
C209, 210	<b>ECEA50Z3R3</b>	Electrolytic, 3.3μF, 50V
C213, 214	△ <b>ECEA16N10</b>	Non-Polar Electrolytic, 10μF, 16V
C215, 216	ECQM1H272KZ	Polyester, 0.0027μF, 50V, ±10%
C217, 218	ECQM1H183KZ	Polyester, 0.018μF, 50V, ±10%
C219, 220	ECQM1H123KZ	Polyester, 0.012μF, 50V, ±10%

Ref. No.	Part No.	Part Name & Description
C221, 222	ECQM1H683KZ	Polyester, 0.068μF, 50V, ±10%
C223, 224	△ ECEA50N2R2	Non-Polar Electrolytic, 2.2μF, 50V
C225, 226	<b>ECEA1ES331</b>	Electrolytic, 330μF, 25V
C301, 302	ECQM1H103KZ	Polyester, 0.01μF, 50V, ±10%
C401, 402	ECKD1H331KB	Ceramic, 330pF, 50V, ±10%
C403, 404	ECCD1H470K	Ceramic, 47pF, 50V, ±10%
C405, 406	ECKD1H681KB	Ceramic, 680pF, 50V, ±10%
C409, 410	ECCD1H100K	Ceramic, 10pF, 50V, ±10%
C411, 412	ECKD1H102MD	Ceramic, 0.001μF, 50V, ±20%
C413, 414	ECCD2H470K	Ceramic, 47pF, 500V, ±10%
C415, 416	ECKD1H103MD	Ceramic, 0.01μF, 50V, ±20%
C417, 418	ECCD2H101K	Ceramic, 100pF, 500V, ±10%
C419, 420	ECCD2H181K	Ceramic, 180pF, 500V, ±10%
C421, 422	<b>ECEA1HS100</b>	Electrolytic, 10μF, 50V
C423, 424	ECCD1H020C	Ceramic, 2pF, 50V, ±0.25pF
C425, 426	ECCD2H330K	Ceramic, 33pF, 500V, ±10%
C427, 428	ECQM1H472KZ	Polyester, 0.0047μF, 50V, ±10%
C429	<b>ECEA1HS100</b>	Electrolytic, 10μF, 50V
C430	<b>ECEA1HS101</b>	Electrolytic, 100μF, 50V
C431, 432	ECQM1H104KZ	Polyester, 0.1μF, 50V, ±10%
C433, 434	ECQM1H104KZ	Polyester, 0.1μF, 50V, ±10%
C501, 502	ECET50R822	Electrolytic, 8200μF, 50V
C503, 504	<b>ECEA1VS221</b>	Electrolytic, 220μF, 35V
C505, 506	<b>ECEA1ES470</b>	Electrolytic, 47μF, 25V
C507, 508	<b>ECEA1JS330</b>	Electrolytic, 33μF, 63V
C509	<b>ECEA1HS470</b>	Electrolytic, 47μF, 50V
C601, 602	<b>ECEA50ZR1</b>	Electrolytic, 0.1μF, 50V
C603, 604	<b>ECEA50ZR2</b>	Electrolytic, 2.2μF, 50V
C605, 606	<b>ECEA50Z1</b>	Electrolytic, 1μF, 50V
C607, 608	<b>ECEA1CS330</b>	Electrolytic, 33μF, 16V

**ACCESSORIES**

A1	△ XBA2C31SS0	Fuse, 3.15A (250V) Speaker Circuit
A2 [X, XA] only	△ SJP5213-1	Plug Adapter, AC Power
A3 [X, XA] only	△ SJP5215	Plug Adapter, AC Power

**PACKING PARTS**

P1	SPP575	Polyethylene Bag
P2 [X, XA, XAL]	SPS1967	Pad, Left Side
P2	SPS1967-1	Pad, Left Side
P3 [X, XA, XAL]	SPS1969	Pad, Right Side
P3	SPS1969-1	Pad, Right Side
P4 [E]	SPG1783	Carton Box
P4 [XE, EG, XGH, EB]	SPG1833	Carton Box
P4 [X, XA]	SPG1835	Carton Box
P4 [XAL]	SPG1837	Carton Box
P4 [XGF]	SPG1781	Carton Box
P5 [E, EG, XGH, XGF, EB]	SQF10079	Instructions Book, Printed Matter
P5 [X, XA, XE, XAL]	SQF10081	Instructions Book, Printed Matter

**Notes:** \* (X) and (XA) are available in Asia, Latin America, Middle East and Africa only.  
 \* (XAL) is available in Australia only.  
 \* (XGH) is available in Holland only.  
 \* (E) and (EG) are available in Scandinavia and European only.

\* (EB) is available in Belgium only.  
 \* (XGF) is available in France only.  
 \* (XE) is available in United Kingdom only.

**■ CHANGE OF PARTS LIST**

# SU-8055K


(X), (XA), (XAL), (XGH), (E), (EG), (EB)

**NO Note:** This parts list included only the changes of the model SU-8055 parts list.

Ref. No.	Change of Part No.		Part Name Description
	SU-8055	→ SU-8055K	
<b>CABINET and CHASSIS PARTS</b>			
1	SBN821	SBN827	Knob, Volume
2	SBN823	SBN829	Knob, Rec Selector & Input Selector
3	SBN825	SBN831	Knob, Speakers Selector, Bass, Treble & Balance
4	SGWU8055D	SGWU8055KE	Panel, Front Ass'y
7	SBC197	SBC197-1	Button, Range, Meter, Subsonic Filter, Phono High Filter & Loudness Switch
8	SYE545	SYE545-1	Bracket, Fluorescent Peak-Power Meters
9	SBD19	SBD19-1	Button, Power Switch


Ref. No.	Change of Part No.		Part Name Description
	SU-8055	SU-8055K	
18	SGP1670A [E]	SGP1670B [E]	Rear Panel
	SGPU8055E [X, EG, XGH, XGF, EB]	SGPU8055KD [XGH, EB, EG]	Rear Panel, SGP1670B with Name Plate (SGT19610)
	SGPU8055L [XAL]	SGPU8055KL [XAL]	Rear Panel, SGP1670-1A with Name Plate (SGT19930)
	SGP1650-1A [X, XA]	SGPU8055KX [X, XA]	Rear, Panel, SGP1650-1A with Name Plate (SGT19930)
20	SHR127 [E, X, XA, EG, XGH, XGF, EB]	SHR127 [E, X, XA, EG, EB, XGH]	Bushing, AC Cord
	SHR129 [XE]	SHR131 [XAL]	Bushing, AC Cord
	SHR131 [XAL]		
21	RJA23ZC [E, EG, XGH, XGF, EB]	RJA23ZC [E, EG, XGH, EB]	AC Cord, Power Source
	SJA97 [X, XA]	SJA97 [X, XA]	AC Cord, Power Source
	RJA45ZC [XE]	QFC1207M [XAL]	AC Cord, Power Source
	QFC1207M [XAL]		
23	SKA10414	SKA10418	Cabinet
<b>SCREWS and WASHERS</b>			
57	XTB4+8FFN	XTB4+8FFZ	Screw, Cabinet M'tg
58	XTB3+8BFN	XTB3+8BFZ	Screw, Cabinet M'tg
	XWC3B	XWC3B	Washer, Cabinet Screw
<b>PACKING PARTS</b>			
P4	SPG1783 [E]	SPG1963 [E]	Carton Box
	SPG1833 [X, EG, XGH, XB]	SPG1965 [XGH, EB, EG]	Carton Box
	SPG1835 [X, XA]		
	SPG1837 [XAL]	SPG2025 [X, XA, XAL]	Carton Box
	SPG1781 [XGF]		

## ■ PACKINGS

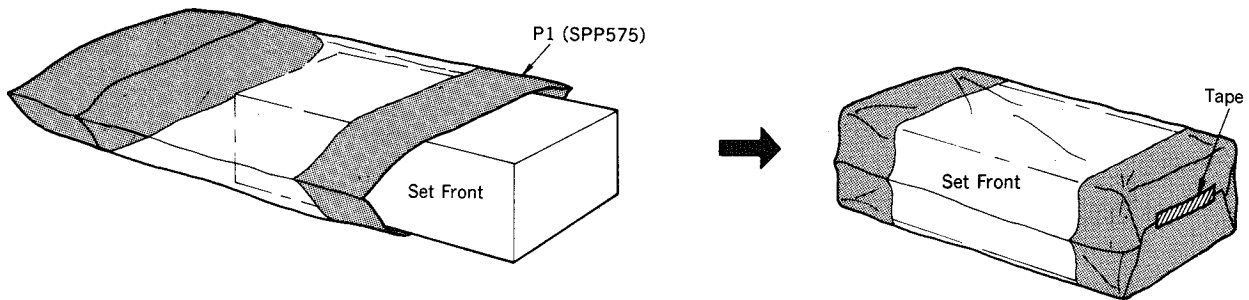


## ■ ACCESSORIES


A1 (XBA2C31SS0)

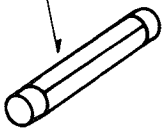

A2 (SJP5213-1)

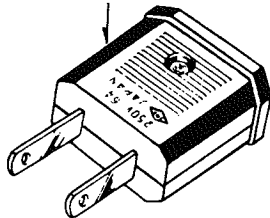

A3 (SJP5215)

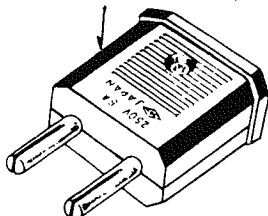

P2 { (SPS1967).....(X, XA, XAL) only  
(SPS1967-1)

P5 and Accessories

