

RECEIVED MAR 1 6 1983

111 mar 1111 marian - C

AUDIO DIGITAL TIMER

07-500

MODEL DT-500 COMES IN SIX VERSIONS DISTINGUISHED AS FOLLOWS:

Туре	Voltage	Remarks
KU	120V only	U.S.A. model
КС	120V only	Canada model
S	110V, 120V, 220V and 240V (Switchable)	General export model
S/G	110V, 120V, 220V and 240V (Switchable)	U.S. Military model
YB	240V only	United Kingdom model
NE	220V only	Europe model

• This service manual is applicable to the DT-500/S,S/G. When repairing the DT-500/KU, please see page 11, and for the other types, please refer to the additional service manuals.

CONTENTS

1.	SPECIFICATIONS	2	ADDITIONAL SERVICE MANUAL (For KU model)	
2.	PARTS LOCATIONS	2	1. SPECIFICATIONS	11
3.	FRONT PANEL FACILITIES	3	2. CONTRAST OF MISCELLANEOUS PARTS	11
4.	EXPLODED VIEW	4	3. PARTS LIST	12
5.	SCHEMATIC DIAGRAMS	5	4. SCHEMATIC DIAGRAMS	13
6.	P.C. BOARD CONNECTION DIAGRAM	7	5. P.C. BOARD PATTERNS	15
7.	PARTS LIST	9		
8	PACKING	10		

1. SPECIFICATIONS

Timer Section
Display of Time Digital display of fluorescent
display tube
Timer Type24-hour type (12-hour display and AM/PM)
Timer Set Only one ON/OFF time setting in minimum
units of minutes within a 24-hour period
Timer Setting Interval 1 minute
Sleep Timer Type On time duration; 1 minute
to 1 hour 59 minutes
Accuracy of Time Synchronized with line frequency
Accuracy of Timer ON time accuracy; Delay
time to displayed time Max. +0.1 second
Accuracy of Sleep Timer Delay time for OFF to
displayed time; No more than 59 second


Miscellaneous

2. PARTS LOCATIONS

These parts locations are applicable to the DT-500/KU.


• The A mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Front Panel

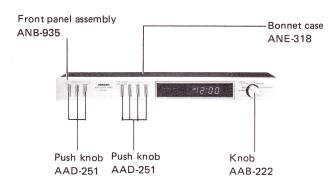


Front View with Panel Removed


without notice due to improvements.

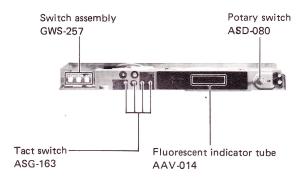


Top View with Bonnet Removed

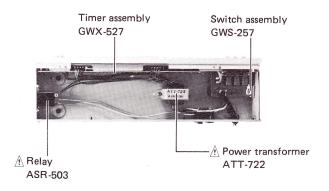

Rear Panel

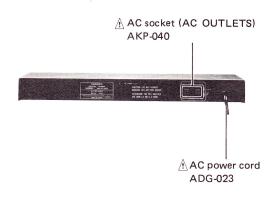

3. FRONT PANEL FACILITIES

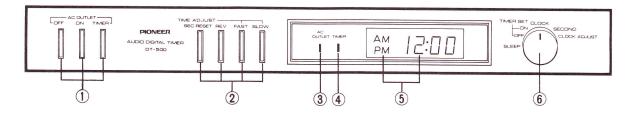

① AC OUTLET SELECTOR (OFF/ON/TIMER)

The AC OUTLET selectors are used when switching on and off the power to the components connected to the timer and thereby activating the timer, and also when giving priority to the timer function and switching on and off the power manually.

OFF: When this switch is depressed, the power being supplied to the connected components is switched off.

ON: When this switch is depressed, the power to the connected components is switched on.

TIMER: When this switch is depressed, the power being supplied to the connected components can be switched on and off by the timer switch function.

② TIME ADJUST SWITCHES

These switches are operated when setting the present clock time, the timer switch ON-OFF times and the sleep timer OFF time.

SEC RESET:

This switch works when the mode selector has been set to the SECOND position. When it is depressed, "0:00" appears on the display and when the switch is released, the seconds are counted ("0:00" - "0:01" - "0:02").

REV: When this switch is depressed together with the FAST or SLOW switch, the displayed time is put into reverse. The switch does not work when the mode selector has been set to the SLEEP or SECOND position.

FAST: When this switch is depressed, the displayed time is forwarded quickly.

SLOW: When this switch is depressed, the displayed time is forwarded slowly.

(3) AC OUTLET INDICATOR

This indicator lights when power is being supplied to the AC outlet on the rear panel.

4) TIMER INDICATOR

This indicator lights when the AC OUTLET-TIMER switch has been depressed.

(5) TIME DISPLAY

The following displays appear in line with the position of the mode selector.

MODE SELECTOR	TIME DISPLAY
SLEEP	Time remaining until the sleep timer goes OFF.
TIMER SET-OFF	Time set for the timer switch to go OFF.
TIMER SET-ON	Time set for the timer switch to come ON.
CLOCK	Present time in hours, minutes, AM or PM.
SECOND	Rightmost minute digit and second display.
CLOCK ADJUST	When the clock is set to the present time, the time is displayed in accordance with the operation of the time adjust switches.

NOTE:

"AM 12:00" or "0:00" may flash on the time display when the timer's power plug has been connected to a household AC outlet or when the power is restored after a power failure during actual operation.

6 MODE SELECTOR

This is used to select the timer switch functions.

SLEEP: Set here to set the sleep time.

TIMER SET-OFF: Set here to set the time at which the

power to the connected components is to be switched off by the timer.

TIMER SET-ON: Set here to set the time at which the

power to the connected components

is to be switched on by the timer.

CLOCK: The present time is indicated on the

time display. The mode selector is


normally set to this position.

SECOND: Set here to set seconds of the present

time correctly. Also set here to check the rightmost minute digit of the present time and the second display.

CLOCK ADJUST: Set here for setting the present time.

4. EXPLODED VIEW

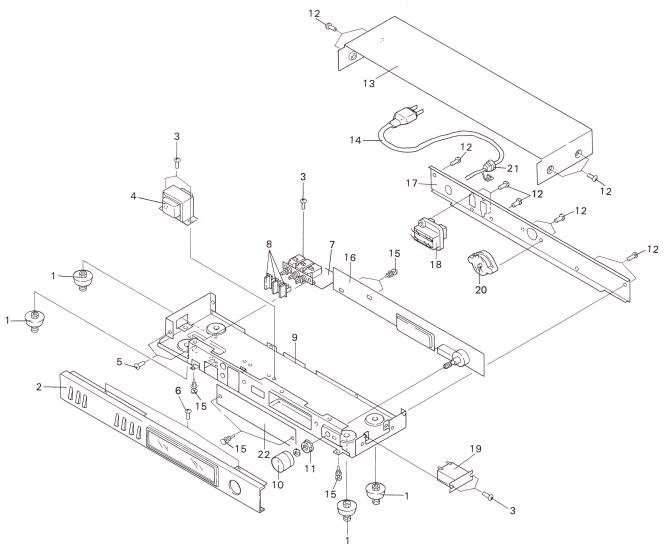



NOTES

- Parts without part number cannot be supplied.
- The \wedge mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Parts list

Key No.	Part No.	Description	Key No.	Part No.	Description
1.	AEC-609	Foot assembly	11.	ABN-024	Nut
2.	ANB-935	Front panel assembly	12.	BBT30P080FZK	Screw
3.	VBZ30P060FMC	Screw	13.	ANE-313	Bonnet case
<u> </u>	ATT-724	Power transformer	<u> 14.</u>	ADG-046	AC power cord
5.	PMZ30P060FZB	Screw	15.	AEC-384	Nylon rivet
6.	BCZ30P080FMC	Screw	16.	GWX-526	Timer assembly
7.	GWS-256	Switch assembly	17.		Rear panel
8.	AAD-251	Push knob	18.	AKP-040	AC socket (AC OUTLETS)
9.		Chassis	<u> </u>	ASR-502	RL1 Relay
10.	AAB-222	Knob	<u>^</u> 20.	AKX-063	S9 Line voltage selector
			21.	AEC-327	Strain relief
			22.	AEC-725	Acrylic filter

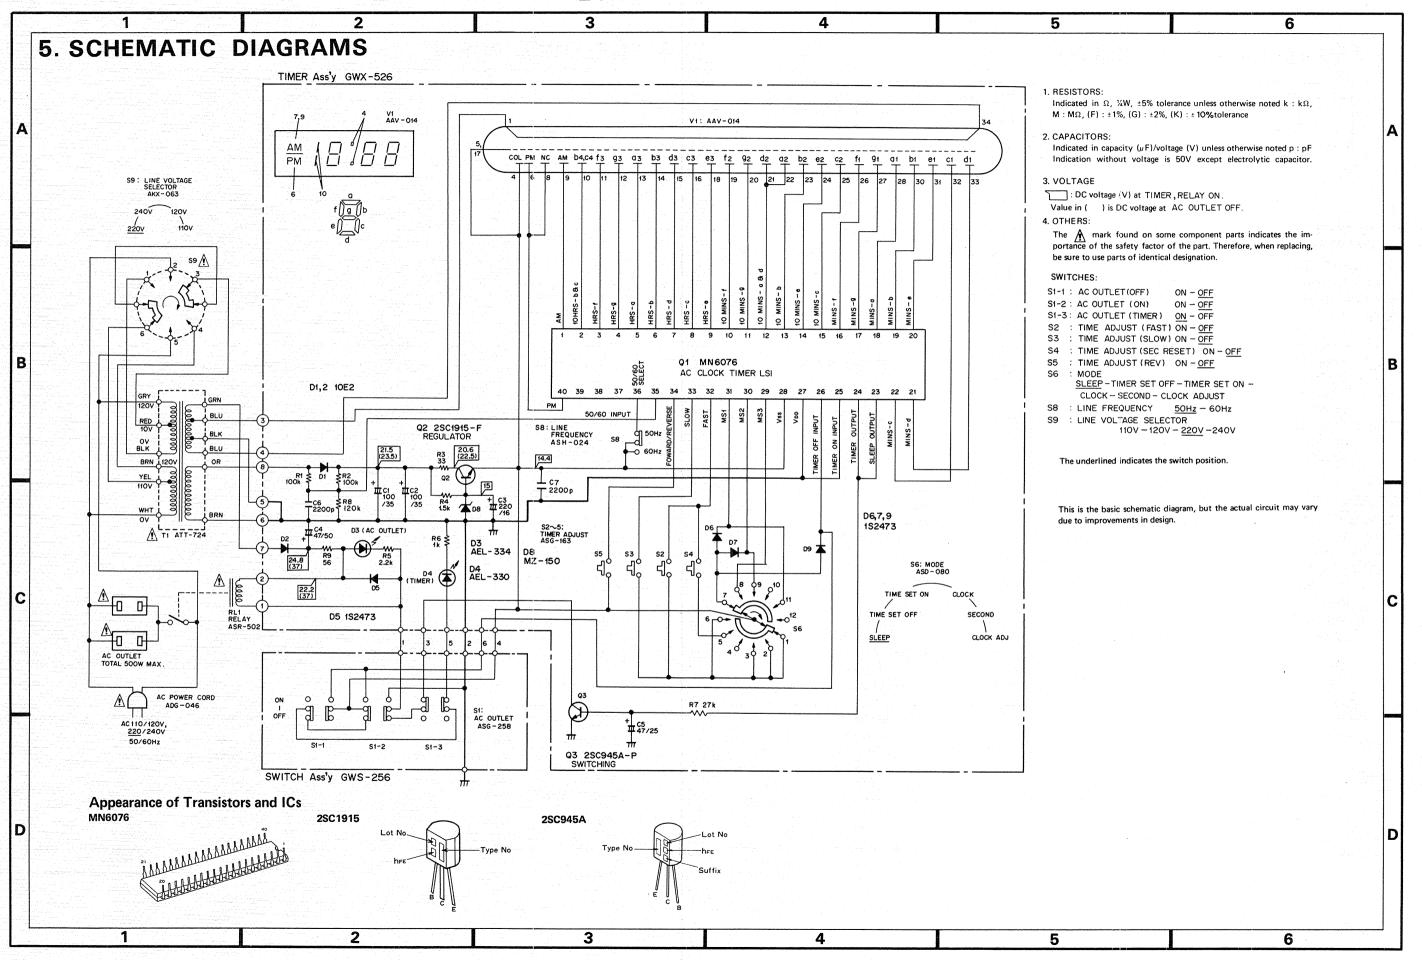

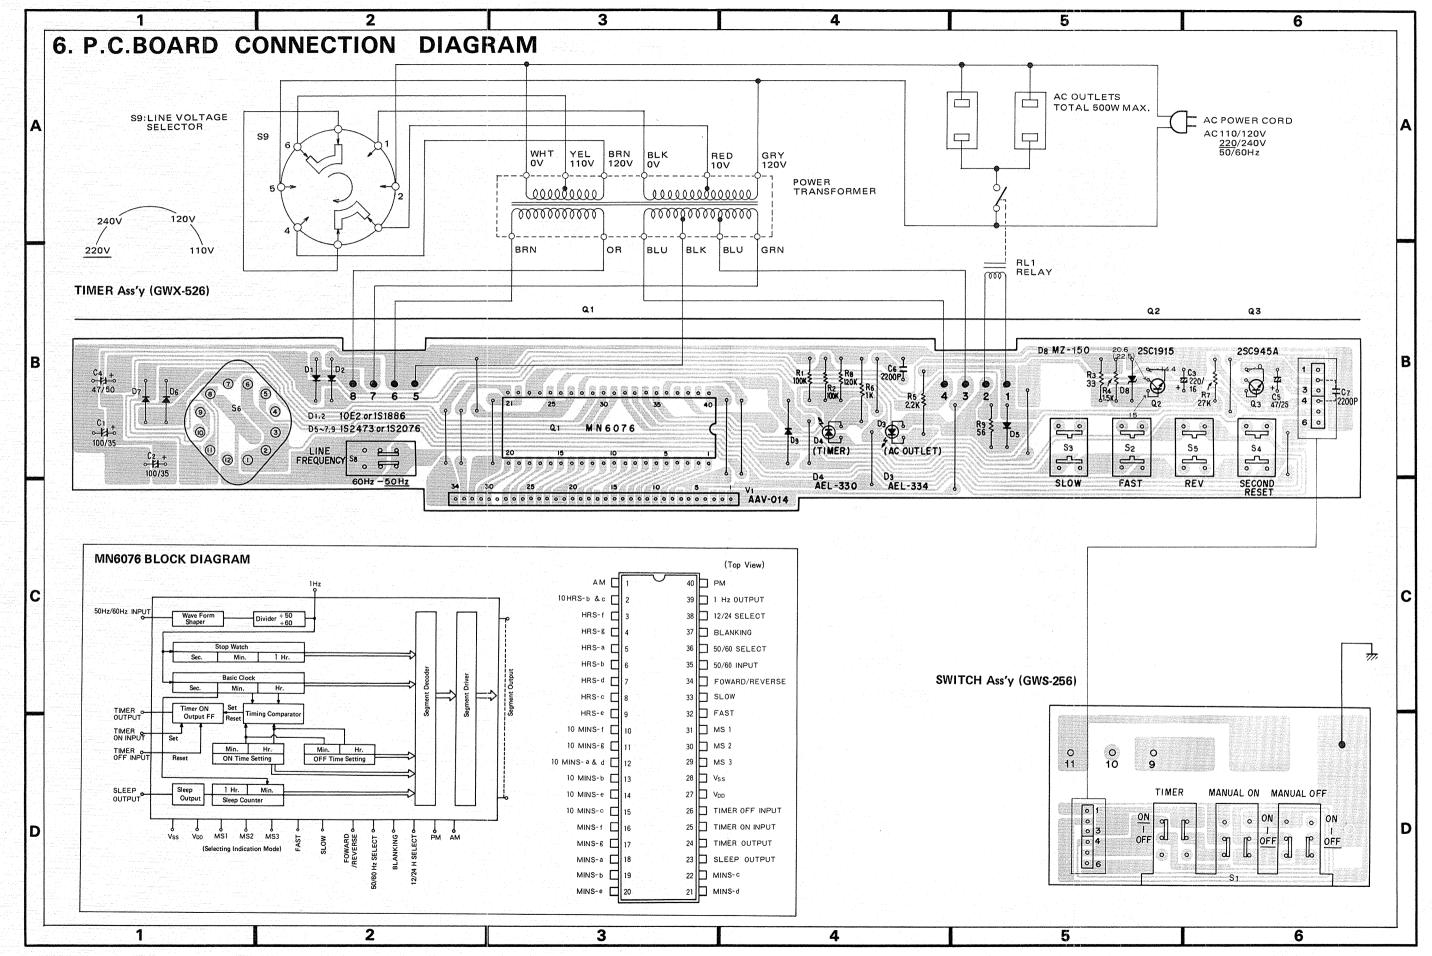

7. PARTS LIST

NOTE:

- · When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

 1Ω ——010 RS1P @ I I

- Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors). $5.62k\Omega$ 562×10^{1} $5621 \dots$ $RN^{1}\!\!/4SR$ 5621F
- The A mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

7.1 TIMER ASSEMBLY (GWX-526)

SWITCHES

Part No.	Symbol &	Description	Part No.	Symbol & Description
ASG-163	S2-S5	Tact switch	10E2	D1, D2
ASD-080	S6	Rotary switch	(1S1886)	
ASH-024	S8	Slide switch	AEL-334	D3
			AEL-330	D4
CAPACITORS			1S2473	D5-D7, D9
0, 11, 7, 101, 101, 10			(1S2076)	
Part No.	Symbol &	Description	MZ-150	D8
	-		(WZ-150)	
CEA 101M 35L	C1, C2			
CEA 221M 16L	C3		OTHER	
CEA 470M 50L	C4		OTTL	
CEA 470M 25L	C5		Part No.	Symbol & Description
CKDYB 222K 50	C6, C7		1 100 100 100 100 100 100 100 100 100 1	
Note:	When orde	ring resistors, convert the	AAV-014	V1 Fluorescen
RESISTORS		value into code form, and te the part no. as before.		
Part No.	Symbol &	Description	7.2 SWITCH	ASSEMBLY (GWS-256)
RD%PM □□□ J	R1-R9		Part No.	Symbol & Description

SEMICONDUCTORS


Part No.	Symbol & Description	
MN6076	Q1	
2SC1915	Q2	
2SC945A	Q3	

10E2	D1, D2	
(1S1886)	01,02	
AEL-334	D3	
AEL-330	D4	
1S2473	D5-D7, D	9
(1S2076)		
MZ-150	D8	
(WZ-150)		
OTHER		
Part No.	Symbol &	Description
AAV-014	V1	Fluorescent indicator tube

LY (GWS-256)

Part No.	Symbol	Symbol & Description			
ASG-258	S1	Push switch			

8. PACKING

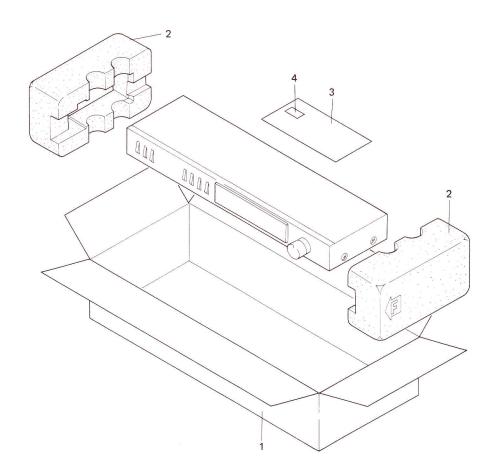

Parts list

Key No.	Part No.	Description
1.	AHD-841	Packing case
2.	AHA-256	Side pad
3.	ARB-383	Operating instructions
4.	AEA-049	Rubber cushion assembly



AUDIO DIGITAL TIMER SERVICE OF THE SERVICE OF THE

1. SPECIFICATIONS

The specifications for KU type is the same as the S type except for following sections.

Miscellaneous

AC outlets Capacity Power Total of two AC outlets 500W max. (inductive load) Power Requirements AC 120V, 60Hz

2. CONTRAST OF MISCELLANEOUS PARTS

NOTES:

• Parts without part number cannot be supplied.

• The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Symbol	Description	Part No.			
- Cymbol		S type	S/G type	KU type	Remarks
	Timer assembly	GWX-526	GWX-526	GWX-527	
	Switch assembly	GW \$ -256	GWS-256	GWS-257	
⚠ RL1	Relay	ASR-502	ASR-502	ASR-503	
<u></u>	Line voltage selector	AKX-063	AKX-063		
<u> </u>	Power transformer	ATT-724	ATT-724	ATT-722	
\triangle	AC power cord	ADG-046	ADG-046	ADG-023	
	Operating instructions	ARB-383	ARB-383	ARB-385	

3. PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 - Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

 $5.62k\Omega$ 562×10^{1} $5621 \dots RN4SR$ 5621 F

• The A mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

3.1 TIMER ASSEMBLY (GWX-527)

SWITCHES

ASG-163 S2—S5 Tact switch ASD-080 S6 Roatry switch

CAPACITORS

Part No.	Symbol & Description	
CEA 101M 35L	C1, C2	
CEA 221M 16L	C3	
CKDYB 222K 50	C6, C7	
CEA 470M 25L	C5	
CEA 470M 50L	C4	

RESISTORS

Part No.	Symbol & Description	
FD¼PM 🗆 🗆 🗗 J	R1_R9	

SEMICONDUCTORS


Part No.	Symbol & Description	
MN6076	Q1	
2SC1915	Q2	
2SC945A	Q3	
10E2 (1S1886)	D1, D2	
AEL-334	D3	
AEL-330	D4	
1S2473 (1S2076)	D5-D7, D9	
MZ-150 (WZ-150)	D8	
1S2473 (1S2076) MZ-150	D5—D7, D9	

OTHER

Part No.	Symbol	Symbol & Description		
AAV-014	V1	Fluorescent indicator tube		


3.2 SWITCH ASSEMBLY (GWS-257)

Part No.	Symbol & Description		
ASG-258	S1	Push switch	

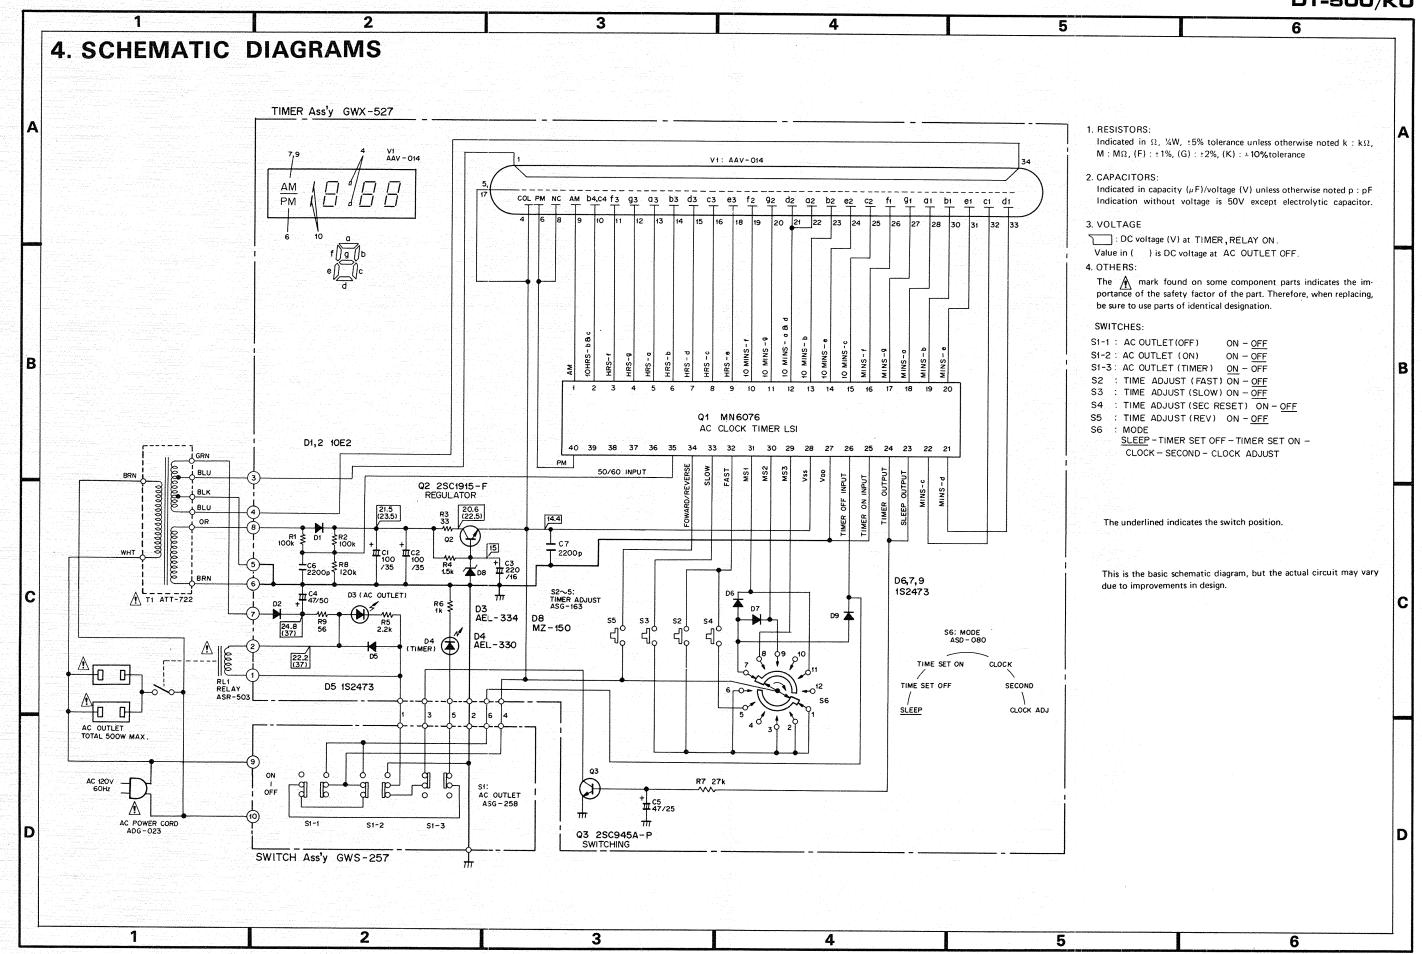

5. P.C.BOARD PATTERNS

5.1 TIMER ASSEMBLY (GWX-527)

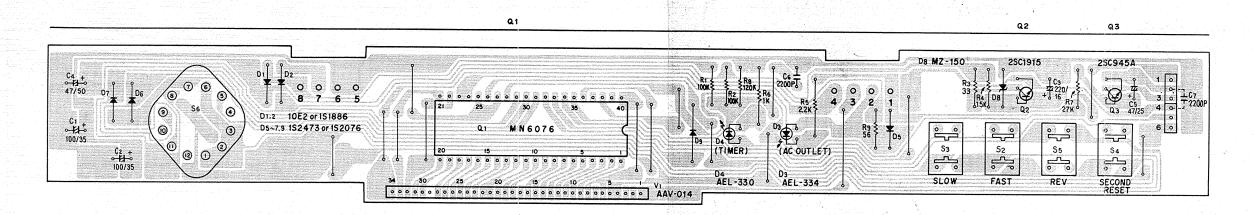

5.2 SWITCH ASSEMBLY (GWS-257)

